

# **Agilent 16900 Series Logic Analysis Systems**

## **Installation Guide**



**Agilent Technologies**

# Notices

© Agilent Technologies, Inc. 2004-2007

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

## Manual Part Number

16900-97011

## Edition

Ninth edition, December 2007

Printed in Malaysia

Agilent Technologies, Inc.  
1900 Garden of the Gods Road  
Colorado Springs, CO 80907 USA

## Trademark Acknowledgements

Windows and MS Windows are U.S. registered trademarks of Microsoft Corporation.

Windows NT is a U.S. registered trademark of Microsoft Corporation.

## Warranty

**The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.**

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as

defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

## Safety Notices

### CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

### WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

# Installation at a Glance

## 16900 Series Logic Analysis System Overview



The Agilent Technologies 16900 Series logic analysis systems are modular systems with slots for logic analyzer and other types of measurement modules.


**Table 1** Model comparisons

Agilent model number	Number of slots	Multiframe Pro	Display and resolution	PCI expansion slots
<b>16900A</b>	6	Yes	Uses external display, supports up to four external displays at up to 1600 x 1200 (with PCI video card)	2 full profile 1 low profile
<b>16901A</b>	2	Yes	Built-in color touch screen display, 15 inch at 1024 x 768, supports external monitor (without additional PCI video card)	1 full profile
<b>16902A</b>	6	Yes	Built-in color touch screen display, 12.1 inch at 800 x 600, supports up to four external monitors at up to 1600 x 1200 (with PCI video card)	2 full profile 1 low profile
<b>16902B</b>	6	Yes	Built-in color touch screen display, 15 inch at 1024 x 768, supports external monitor (without additional PCI video card)	1 full profile
<b>16903A</b>	3	No	Built-in color touch screen display, 12.1 inch at 800 x 600, supports up to four external monitors at up to 1600 x 1200 (with PCI video card)	1 full profile 1 low profile

All models have a familiar Windows-based user interface which takes the complexity out of making logic analyzer measurements. You can perform all operations directly from one window.

- Supplied accessories:
  - PS2 mouse.
  - PS2 Mini keyboard.
  - Accessory pouch and power cord.
  - Ten-conductor flying lead cable for target control port (on 16900A, 16902A, 16902B, and 16903A models).
- Optional accessories:
  - Multiframe cable (E5861A).
  - 1 Gbit low-profile LAN card (Option 014 or E5860A for 16900A, 16902A, and 16903A models).
  - Probes.

# In This Guide

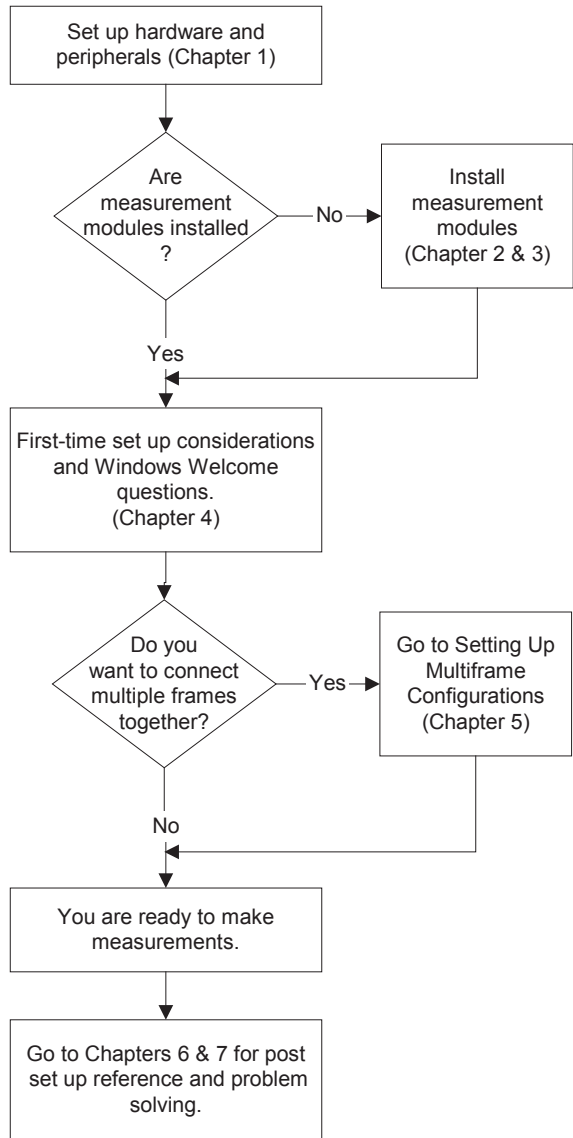



# Contents

Installation at a Glance 3

In This Guide 5

## 1 Setting Up Hardware

To connect the mouse, keyboard, and monitor 14

To connect to a LAN 17

To connect a printer 18

To make time-correlated measurements with an Agilent oscilloscope 19

## 2 Installing Logic Analyzer Cards and Probes

Software Requirements 23

To connect probes 24

To replace thumb screws on measurement modules 24

To install, remove, or replace measurement modules 26

16960A Logic Analyzer (1-card module) 30

16960A Logic Analyzer (2-card, 3-card, and 4-card modules) 31

16951/50B Logic Analyzer (1-card module) 36

16951/50B Logic Analyzer (2-card module) 37

16951/50B Logic Analyzer (3-card module) 38

16951/50B Logic Analyzer (4-card module) 39

16951/50B Logic Analyzer (5-card module) 40

16950A, 16756/55/54/53A Logic Analyzer (1-card module) 41

16950A, 16756/55/54/53A Logic Analyzer (2-card module) 42

16950A, 16756/55/54/53A Logic Analyzer (3-card module)	43
16950A, 16756/55/54/53A Logic Analyzer (4-card module)	44
16950A, 16756/55/54/53A Logic Analyzer (5-card module)	45
16911A/10A Logic Analyzer (1-card module)	46
16911A/10A Logic Analyzer (2-card module)	47
16911A/10A Logic Analyzer (3-card module)	48
16911A/10A Logic Analyzer (4-card module)	49
16911A/10A Logic Analyzer (5-card module)	50
16760A Logic Analyzer (1-card module)	51
16760A Logic Analyzer (2-card module)	52
16760A Logic Analyzer (3-card module)	53
16760A Logic Analyzer (4-card module)	54
16760A Logic Analyzer (5-card module)	55
16752/51/50B/A, 16742/41/40A Logic Analyzer (1-card module)	56
16752/51/50B/A, 16742/41/40A Logic Analyzer (2-card module)	57
16752/51/50B/A, 16742/41/40A Logic Analyzer (3-card module)	58
16752/51/50B/A, 16742/41/40A Logic Analyzer (4-card module)	59
16752/51/50B/A, 16742/41/40A Logic Analyzer (5-card module)	60

### 3 Installing Pattern Generator Cards

Software Requirements	62
16720A Pattern Generator (1-card module)	63
16720A Pattern Generator (2-card module)	64
16720A Pattern Generator (3-card module)	65
16720A Pattern Generator (4-card module)	66



16720A Pattern Generator (5-card module) 67

## **4 First-Time Set Up**

First-Time Set Up Considerations 70

Determine Whether the Instrument will be Connected to the Network 70

Get Network Setup Information 70

Answering Windows Welcome Questions 72

If expected Windows Welcome questions do not appear 73

Additional First Time Setup Steps 74

Establishing an Administrator Account  
(recommended for standalone and networked instruments) 74

Protecting the Instrument's Operating System 74

## **5 Setting Up Multiframe Configurations**

Setting Up Simple Multiframe Configurations 76

Simple 100 Base-T Multiframe Configuration 77

Simple 1000 Base-T Multiframe Configuration 78

Rules for Simple Multiframe Configurations 79

Creating Simple Multiframe Configurations 79

Remotely Controlling Simple Multiframe Systems 81

Simple 2-Frame w/Crossover Cable Configuration 82

Setting Up a Performance Multiframe Configuration 84

Rules for Performance Multiframe Configurations 85

Creating a Performance Multiframe Configuration 85

Remotely Controlling a Performance Multiframe System 88

Other Multiframe Configuration Notes 89

I/O in Multiframe Configurations 89

Licenses in Multiframe Configurations 89

## **6 Using and Updating the Logic Analysis System**

To locate information on using the logic analyzer 92

Online Help	92
To locate specifications and characteristics	93
Electrical and Operating Environment Characteristics	93
More Specifications and Characteristics	94
To perform backups	95
To install software	95
Agilent Logic Analysis System Software	95
Optional Products	95
To change network settings	96
To change Windows Firewall settings	97
To give other applications/ports access through the firewall	97
To restore the logic analysis system firewall defaults	99
To power off the system	102
Using the Windows Shutdown	102
Using a Short Press of the Power Button	102
Using a Long Press of the Power Button	103
Unplugging the Power Cord or Power Loss	103
To remove the hard disk drive (16902B)	104
To install interface cards (16900A, 16902A, 16902B, or 16903A)	105
1 Gbit LAN Card	109
To install interface cards (16901A)	110
To replace the CPU battery	113

## 7 Solving Problems

Running Self-Tests	116
If the logic analysis system powers itself down	117
16900A, 16902A, and 16902B logic analysis systems	117
All 16900 Series logic analysis systems	118


If the Power LEDs do not come on	118
If you get a registry error and the system won't boot	118
If you can't write/read CDs	118
If there are multiframe connection problems	119
If there are network connection problems	121
Using the System Recovery Software	122
Contacting Agilent Service/Support	122

## **A Safety Notices**

Warnings	123
To clean the instrument	124
Safety Symbols	124

## **Index**



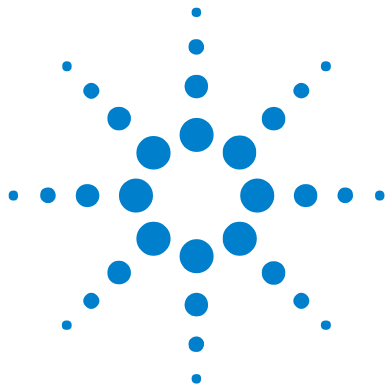

# 1

## Setting Up Hardware

To connect the mouse, keyboard, and monitor [14](#)

To connect to a LAN [17](#)

To connect a printer [18](#)

To make time-correlated measurements with an Agilent oscilloscope [19](#)




### To connect the mouse, keyboard, and monitor


The 16900A logic analysis system must have the system mouse and keyboard connected for the system to boot up properly. Once enabled on the LAN, the system can be operated remotely without a keyboard or mouse. Use of a monitor is optional for the 16901A, 16902A, 16902B, and 16903A.

(The following rear panel figures are representative; yours may look different.)

- 1 Connect the provided PS/2 mouse and keyboard provided to the back of frame.

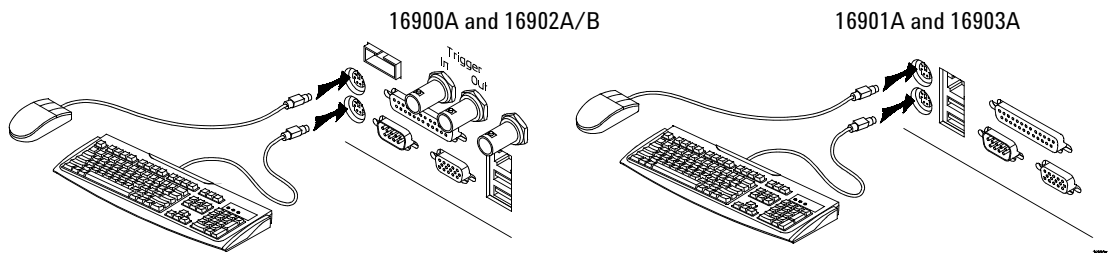

- 2 Connect a monitor to the back of the 16900A. A second monitor on the 16901A, 16902A, 16902B, or 16903A is optional.

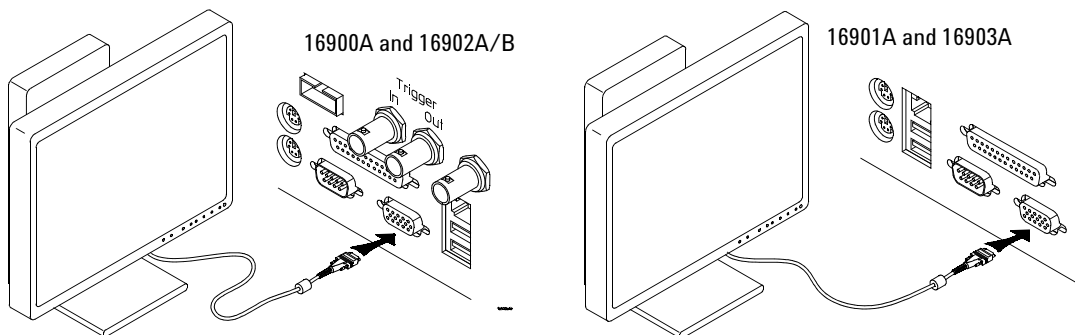


The touch off button switches the Windows desktop from one display device to another. A message will appear in one of the monitors telling you how to use this feature.

- 3 Connect the power cord supplied with your frame.


**NOTE**

The 16900A, 16902A, and 16902B have a special notched power cord in order to provide 1300W to the frame.

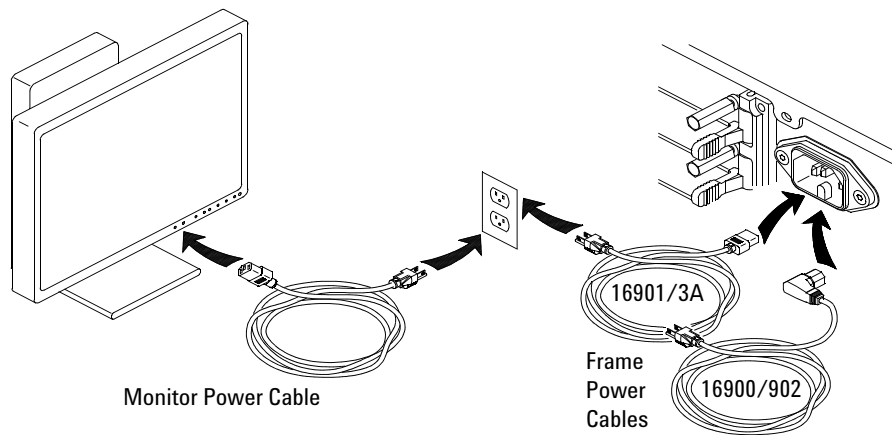

## 1 Setting Up Hardware

- 4 Allow a minimum of 15 cm (6 in.) spacing between instruments for proper cooling.

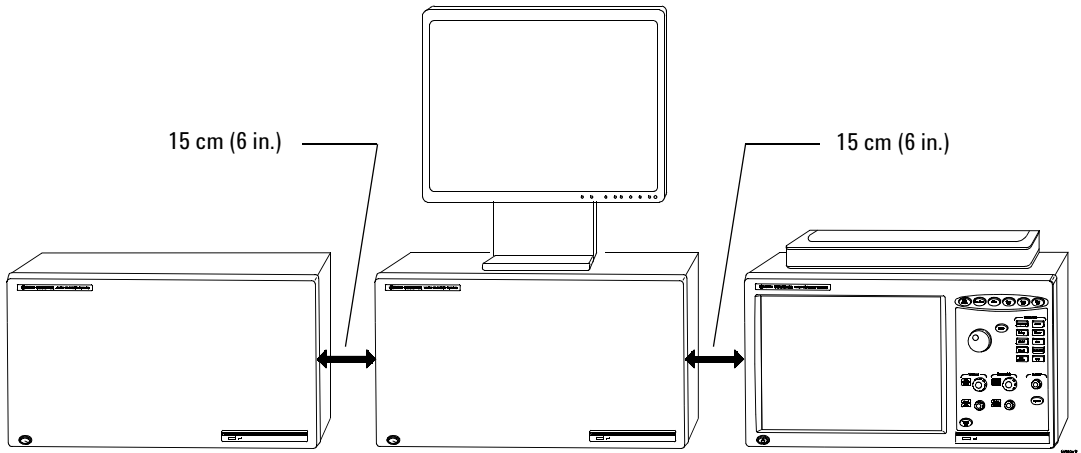



## To connect to a LAN


Local area networks (LAN) are enabled outside of the logic analyzer application using the Windows network configuration wizard.

- 1 Connect the LAN cable(s) to the back of your logic analysis system.
  - Agilent recommends using a 1 Gbit LAN card when networking multiple frames.

The 16902B and 16901A frames have an integrated 1 Gbit LAN interface.

For information on installing a 1 Gbit LAN card in your system, See “[To install interface cards \(16900A, 16902A, 16902B, or 16903A\)](#)” on page 105.

- For information on network configurations when connecting multiple frames see [Chapter 5](#), “Setting Up Multiframe Configurations on page 75.

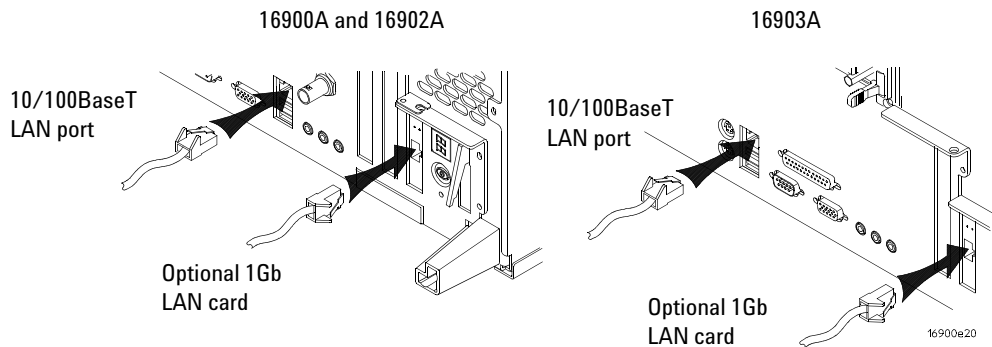

### NOTE

Microsoft recommends the following three steps to ensure the instrument's PC is protected:

- a Use an internet firewall.
- b Get computer updates.
- c Use up-to-date antivirus software.

- 2 Refer to “[First-Time Set Up](#)” on page 69 to answer the Windows Welcome when you power up the logic analyzer.

### To connect a printer

Local and network printers are added outside of the logic analyzer application using the Windows add printer wizard.

- 1 Connect the printer cable to the back of your logic analysis system. If using a network printer ensure the LAN cable is connected.
- 2 Click **Start>Settings>Printers>Add Printer**.
- 3 Follow the Windows add printer wizard instructions.


## To make time-correlated measurements with an Agilent oscilloscope

You can make time-correlated measurements between an Agilent 16900 Series logic analyzer and Agilent 5000, 6000, 548xx, 8000, or 80000 Series oscilloscopes.


Measurements between the logic analyzer and Agilent oscilloscope are automatically de-skewed. The instruments communicate with one another through a LAN connection and Trigger In/Trigger Out.

The instruments connect to your device under test through separate probes, just as when they are used independently. The oscilloscope time markers and two logic analysis system global markers are time-correlated and track each other.

To set up and use the time-correlated connection, choose **Setup>Add External Scope...** in the *Agilent Logic Analyzer* application.

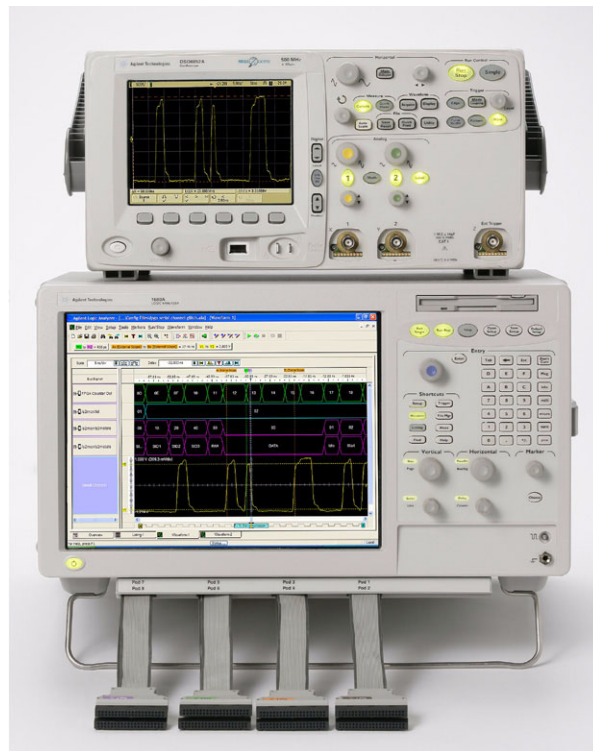



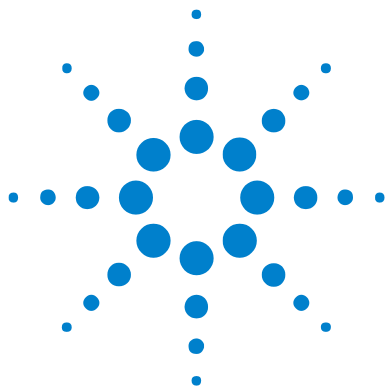

## 2 Installing Logic Analyzer Cards and Probes

Software Requirements	23
To connect probes	24
To replace thumb screws on measurement modules	24
To install, remove, or replace measurement modules	26
16960A Logic Analyzer (1-card module)	30
16960A Logic Analyzer (2-card, 3-card, and 4-card modules)	31
16951/50B Logic Analyzer (1-card module)	36
16951/50B Logic Analyzer (2-card module)	37
16951/50B Logic Analyzer (3-card module)	38
16951/50B Logic Analyzer (4-card module)	39
16951/50B Logic Analyzer (5-card module)	40
16950A, 16756/55/54/53A Logic Analyzer (1-card module)	41
16950A, 16756/55/54/53A Logic Analyzer (2-card module)	42
16950A, 16756/55/54/53A Logic Analyzer (3-card module)	43
16950A, 16756/55/54/53A Logic Analyzer (4-card module)	44
16950A, 16756/55/54/53A Logic Analyzer (5-card module)	45
16911A/10A Logic Analyzer (1-card module)	46
16911A/10A Logic Analyzer (2-card module)	47
16911A/10A Logic Analyzer (3-card module)	48
16911A/10A Logic Analyzer (4-card module)	49
16911A/10A Logic Analyzer (5-card module)	50
16760A Logic Analyzer (1-card module)	51
16760A Logic Analyzer (2-card module)	52
16760A Logic Analyzer (3-card module)	53
16760A Logic Analyzer (4-card module)	54
16760A Logic Analyzer (5-card module)	55
16752/51/50B/A, 16742/41/40A Logic Analyzer (1-card module)	56



## 2 Installing Logic Analyzer Cards and Probes

16752/51/50B/A, 16742/41/40A Logic Analyzer (2-card module)	57
16752/51/50B/A, 16742/41/40A Logic Analyzer (3-card module)	58
16752/51/50B/A, 16742/41/40A Logic Analyzer (4-card module)	59
16752/51/50B/A, 16742/41/40A Logic Analyzer (5-card module)	60

## Software Requirements

The following table gives you the Agilent Logic Analyzer software version required for logic analyzer measurement modules in the 16900A, 16902A, 16902B, or 16903A frames. For information on updating your logic analysis system software go to [“To install software”](#) on page 95.

**Table 2** Software Version Required, Frames

Model Number	Software Version
16903A	02.00 or higher
16902B	03.70 or higher
16902A	02.00 or higher
16901A	03.60 or higher
16900A	02.00 or higher

**Table 3** Software Version Required, Logic Analyzer Modules

Model Number	Software Version
16960A	03.70 or higher
16951B	03.65 or higher
16950B	03.55 or higher
16950A	02.00 or higher
16911A, 16910A	02.00 or higher
16760A	03.20 or higher
16756/55/54/53A	02.00 or higher
16752/51/50B/A, 16742/41/40A	02.00 or higher

### To connect probes

Probing is the key to effective and efficient use of logic analyzers. Agilent Technologies offers a wide variety of probing accessories that support general-purpose and application-specific measurement needs. We provide reliable, electrically and mechanically unobtrusive probes that make it easy to connect your Agilent logic analyzer to your system under test. For more information on Agilent probes:

- See the quick reference card that came with your logic analysis system for an overview of probing solutions.
- Go to [www.agilent.com/find/logic\\_analyzer\\_probes](http://www.agilent.com/find/logic_analyzer_probes) for the most up-to-date information on probe compatibility with a given logic analyzer and purchasing information.
- Go to [www.agilent.com](http://www.agilent.com) and search for Probing Solutions for Logic Analyzers (publication 5968-4632E) for a catalog of detailed probing information.

To connect and set up a probe, follow the instructions in the *User's Guide* that came with the probe.


### To replace thumb screws on measurement modules

If you ordered measurement modules with your logic analysis system, they will have the proper thumb screws and you can skip this procedure.

If you are using a measurement module from a 16700 Series logic analysis system, you may need to replace the thumb screws. The rigid screws on these modules are not compatible with the new ejector levers.

- 1 Remove the retaining ring from the back of the panel then remove the thumb screw.
- 2 Insert the module sleeve into the front of the module panel and screw the nut onto it.

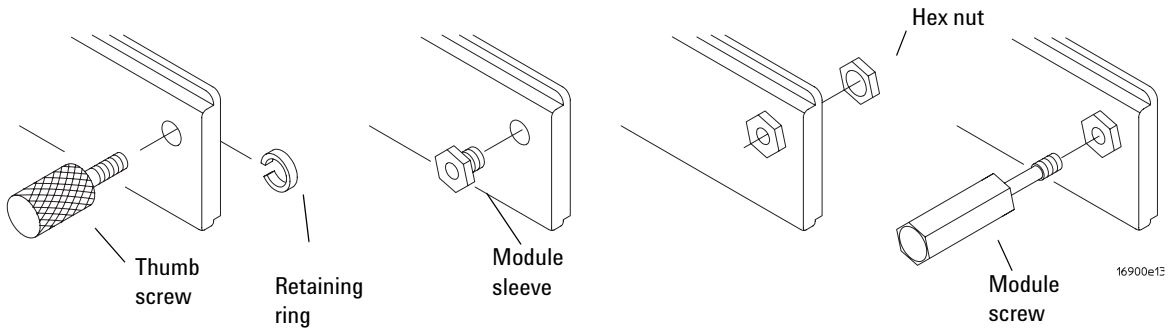

**3** Screw the module screw into the sleeve.

The 16900A/16902A logic analysis system comes with a set of 6 replacement thumb screws (16900-68713), and the 16903A logic analysis system comes with a set of 2 replacement thumb screws (16903-68713).

### To install, remove, or replace measurement modules

If you ordered your measurement modules with the frame, they will already be installed and you can skip this procedure.

If you are using a measurement module from a 16700 Series logic analysis system you will need to replace the thumb screws. Begin with the instructions on [page 24](#).

The following procedure guides you through installing, removing, or replacing measurement modules in the logic analysis system frame. Information on connecting specific multi-card measurement modules is in the next sections of this chapter. Measurement modules with different model numbers cannot be connected together in multi-card (Master/Expander) modules unless stated otherwise.


#### CAUTION

Electrostatic discharge can damage electronic components. Use grounded wrist straps and mats when performing any service to measurement modules.


#### CAUTION

When removing cards that are connected together as multiple-card modules, be sure to eject the multiple cards simultaneously, otherwise, the flex cables and/or connectors could be damaged.

- 1 Power down the system and disconnect the power cable before installing, removing or replacing measurement modules.

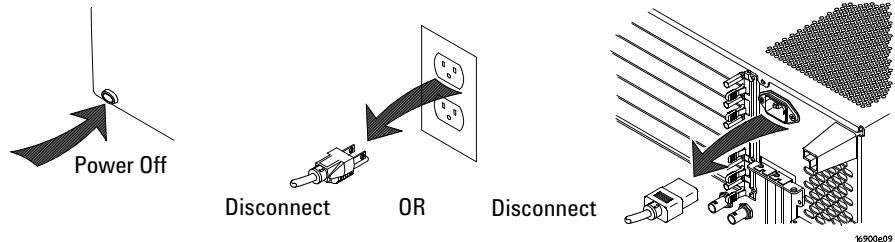


- 2 Remove filler panels as shown in the following figure.
  - a Loosen the thumb screws on the filler panels.
  - b Rotate the ejector levers from the locked position to the open position.
  - c Remove filler panels.

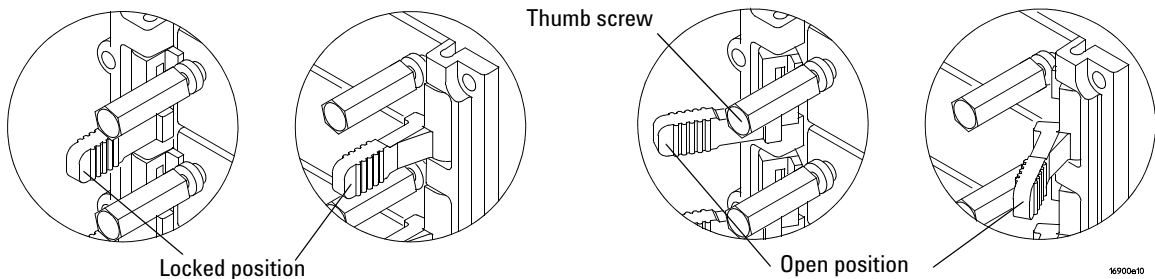


- 3 If you are using a measurement module from a 16700 Series logic analysis system go to [“To replace thumb screws on measurement modules”](#) on page 24. If not, skip this step.
- 4 Ensure all ejectors are fully open and out of the way then slide the module(s) into the logic analysis system frame.

The following figure shows a 6-card frame. The insertion/removal order would be the same for a 3-card frame. A single-module configuration can be installed in any available slot.

## 2 Installing Logic Analyzer Cards and Probes

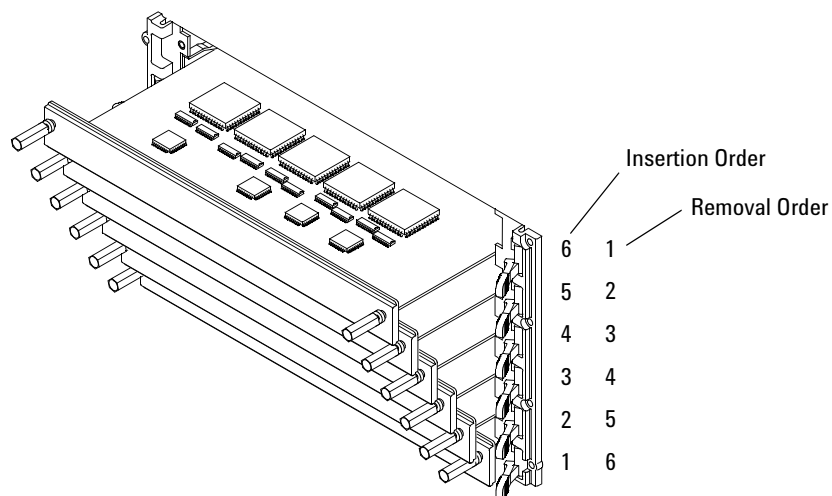

- 5** Seat the modules then rotate the ejector tabs to the locked position. Repeat for all modules or filler panels.

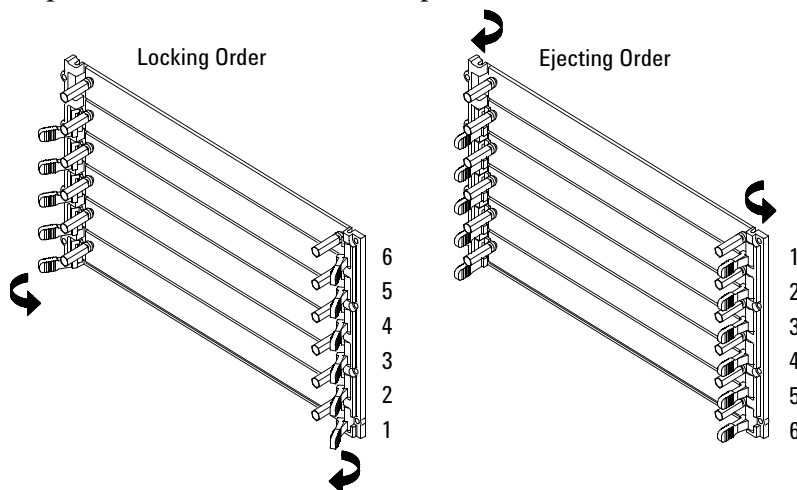

- 6** Tighten the thumb screws until finger tight in the same order used in step 5 above.
- 7** For correct air circulation, install filler panels in all unused card slots. Correct air circulation keeps the instrument from overheating. Keep any extra filler panels for future use.

- 8 Refer to “[First-Time Set Up](#)” on page 69 to answer the Windows Welcome questions when you power up the logic analysis system for the first time.

# 16960A Logic Analyzer (1-card module)


A single-card module can be installed in any available slot.

For a single card, the two 16960-61601 flex cables (kit 16960-60001 in the accessory pouch) are not used.

**NOTE**

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

The order of pods on the card's rear panel is:



In a multi-card set, pods are indexed from the bottom up. Because clock signals can be input to any card in the set (on pod 1 or 3), cards do not have *master* and *expander* designations.

## 16960A Logic Analyzer (2-card, 3-card, and 4-card modules)

Between cards, use a pair of 16960-61602 flex cables (in the accessory pouch) to connect the modules.

### NOTE


The 16960A logic analyzer module must only be combined with other 16960A modules. A 16960A combined set will default to the lowest memory depth in the set.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).


### CAUTION

When removing cards that are connected together as multiple-card modules, be sure to eject the multiple cards simultaneously, otherwise, the flex cables and/or connectors could be damaged.

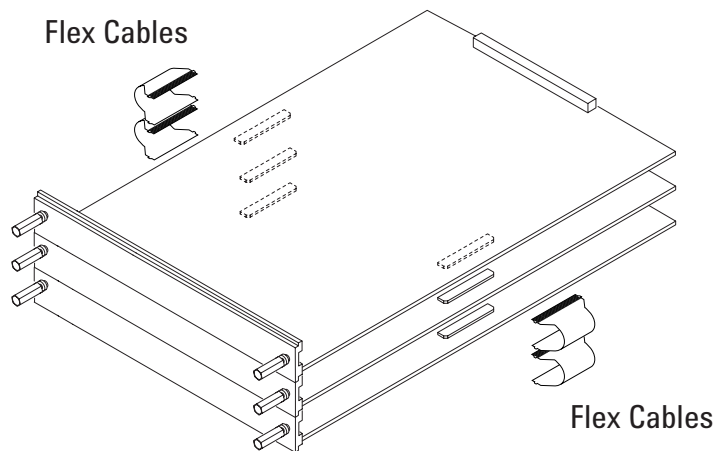


## 2 Installing Logic Analyzer Cards and Probes

- 1 Insert the lowest card about 1/3 of the way into the desired logic analyzer frame slot.

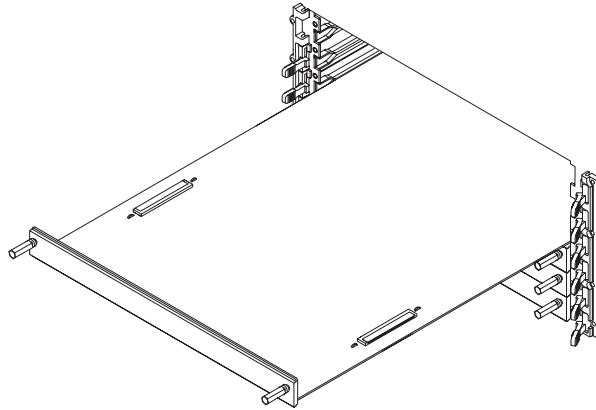


- 2 Before inserting the next card into the desired slot, attach the flex cables to the under side of the card:
  - a Flip up the connector actuator with your thumb or index finger. Do not use any type of tool to open the actuator.

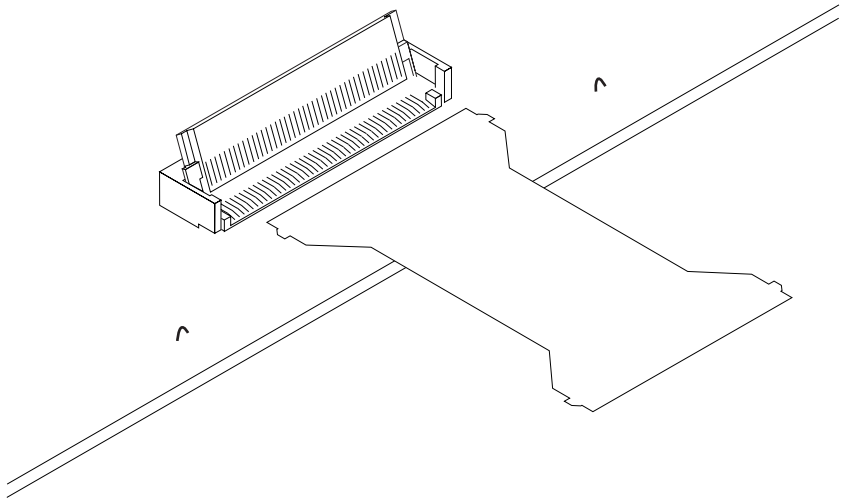




- b** Place the flex cable into the connector, exposed conductive traces towards the card, so that the flex cable ears are secured by the connector guides.

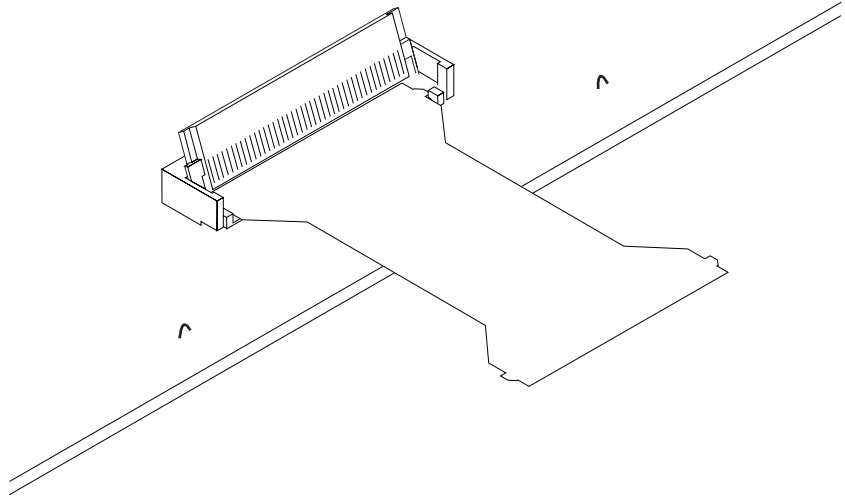


- c** Close the connector actuator.

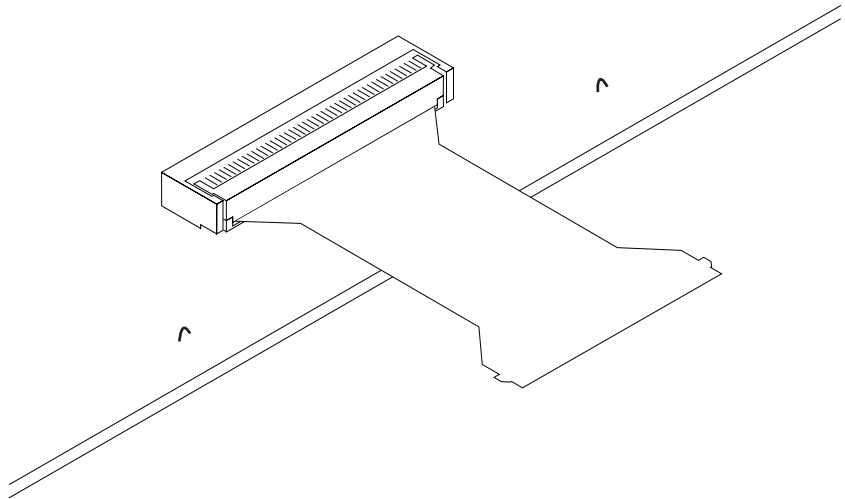

- d** Repeat for the opposite under-side flex cable and connector.

## 2 Installing Logic Analyzer Cards and Probes

- 3 Now, slide the next card about 1/3 of the way into its slot, so that it is aligned with the lower card.

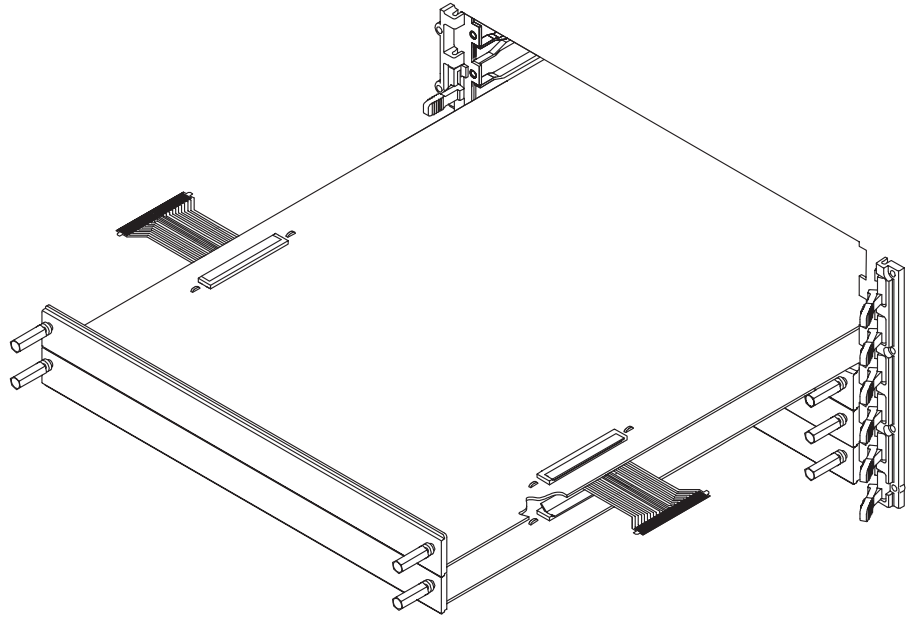


- 4 Attach the flex cables to the top side of the lower card:
  - a Flip up the connector actuator with your thumb or index finger. Do not use any type of tool to open the actuator.
  - b Place the flex cable into the connector, exposed conductive traces towards the card, so that the flex cable ears are secured by the connector guides.

Be careful not to bend the flex cables any more than is necessary to fit between the card connectors.

  - c Close the connector actuator.
  - d Repeat for the opposite top-side flex cable and connector.
- 5 Repeat steps 2-4 for the remaining cards.

- 6 To verify the flex cables are installed correctly, use an ohm meter to check continuity between the pair of test points associated with each connector used.

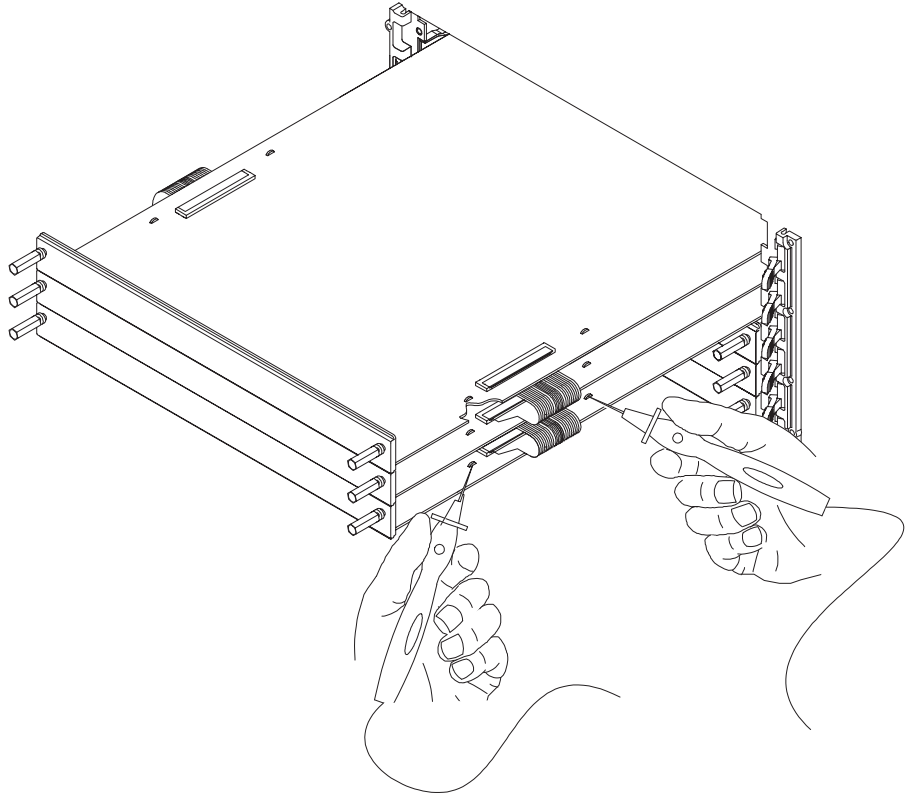

If there is continuity (0 ohms), the flex cable is seated correctly in the connector.

If there is no continuity (infinite ohms), the flex cable is not seated correctly. Repeat the flex cable attachment steps, and check the continuity again.


- 7 While maintaining alignment with the cards as a set, insert them the rest of the way into the slots, seat them, lock the ejector tabs, and tighten the thumb screws.

# 16951/50B Logic Analyzer (1-card module)


Each card shipped stand-alone has the 2 x 15 cable connected in the single-card module configuration. The 2 x 50 cables in the accessory pouch are not used. A single-card module can be installed in any available slot.

**NOTE**

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

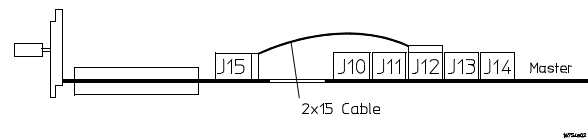

The order of pods on the card's rear panel is:




In a multi-card set, pods are indexed starting with the master card, then with the expander cards from the bottom up.

## 16951/50B Logic Analyzer (2-card module)

Use two 2 x 15 cables and two 2 x 50 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

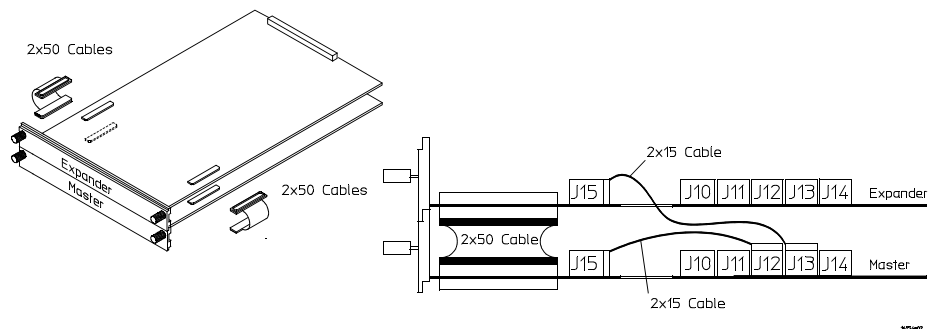

### NOTE

The 16950B logic analyzer module must only be combined with another 16950B module. Likewise, the 16951B logic analyzer module must only be combined with another 16951B module.


A 16950B combined set will default to the lowest memory depth in the set.

### 16951/50B Logic Analyzer (3-card module)

Use three 2 x 15 cables and four 2 x 50 cables (in the accessory pouch) to connect the modules.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

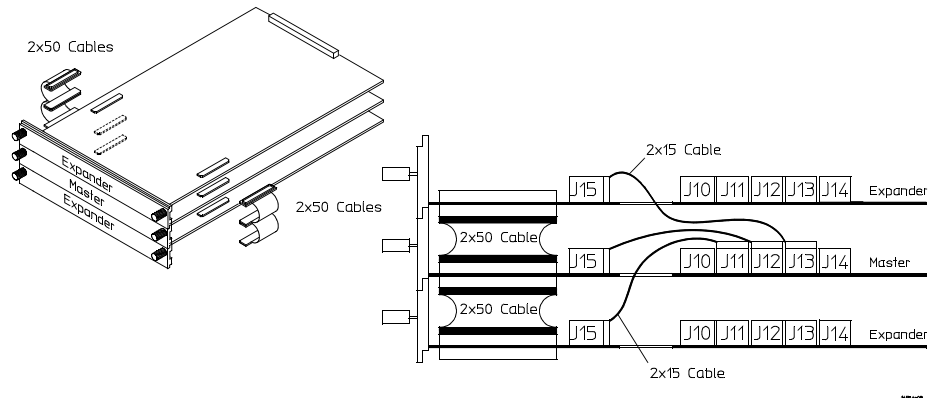

#### NOTE

The 16950B logic analyzer module must only be combined with other 16950B modules. Likewise, the 16951B logic analyzer module must only be combined other 16951B modules.


A 16950B combined set will default to the lowest memory depth in the set.

## 16951/50B Logic Analyzer (4-card module)

Use four 2 x 15 cables and six 2 x 50 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

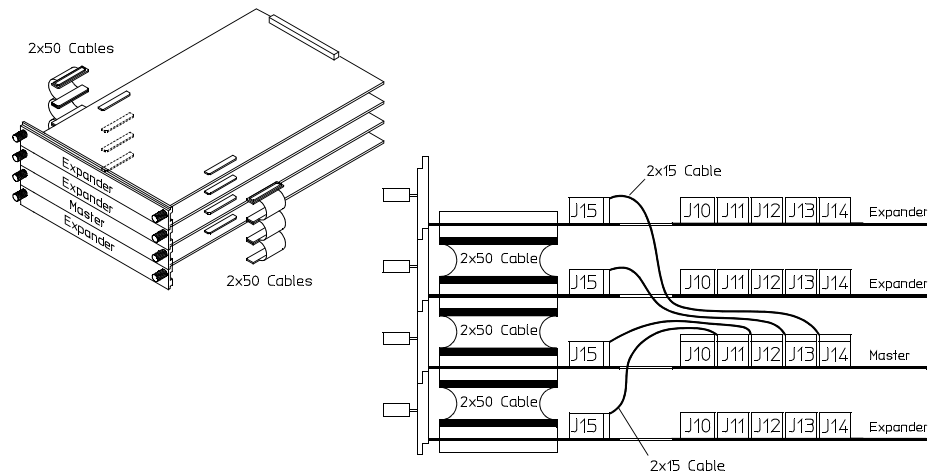

### NOTE

The 16950B logic analyzer module must only be combined with other 16950B modules. Likewise, the 16951B logic analyzer module must only be combined other 16951B modules.


A 16950B combined set will default to the lowest memory depth in the set.

### 16951/50B Logic Analyzer (5-card module)

Use five 2 x 15 cables and eight 2 x 50 cables (in the accessory pouch) to connect the modules.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

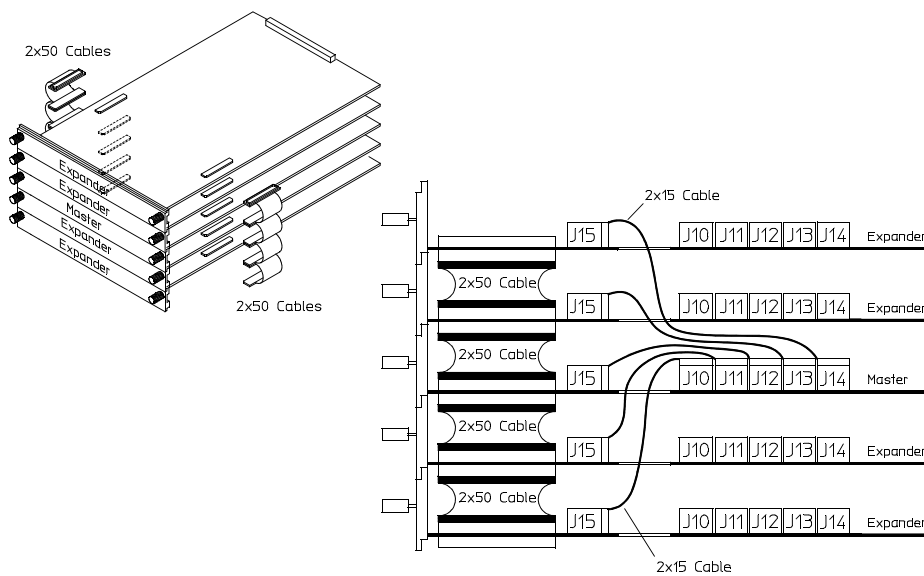

#### NOTE

The 16950B logic analyzer module must only be combined with other 16950B modules. Likewise, the 16951B logic analyzer module must only be combined other 16951B modules.

A 16950B combined set will default to the lowest memory depth in the set.




## 16950A, 16756/55/54/53A Logic Analyzer (1-card module)


Each card shipped stand-alone has the 2 x 15 cable connected in the single-card module configuration. The 2 x 50 cables in the accessory pouch are not used. A single-card module can be installed in any available slot.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

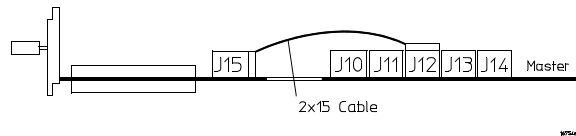

The order of pods on the card's rear panel is:



In a multi-card set, pods are indexed starting with the master card, then with the expander cards from the bottom up.




## 16950A, 16756/55/54/53A Logic Analyzer (3-card module)

Use three 2 x 15 cables and four 2 x 50 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

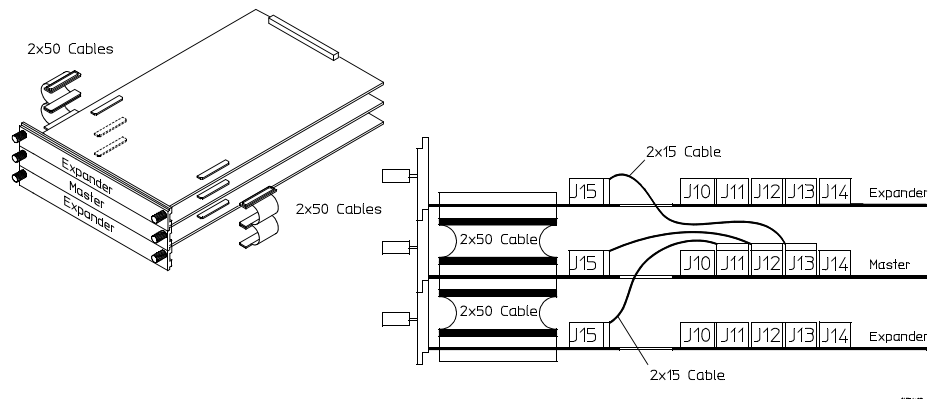

### NOTE

You can combine any combination of 16753A, 16754A, 16755A, 16756A, and 16950A logic analyzer modules in a 3-card set.


The combined set will default to the lowest memory depth in the set.

### 16950A, 16756/55/54/53A Logic Analyzer (4-card module)

Use four 2 x 15 cables and six 2 x 50 cables (in the accessory pouch) to connect the modules.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

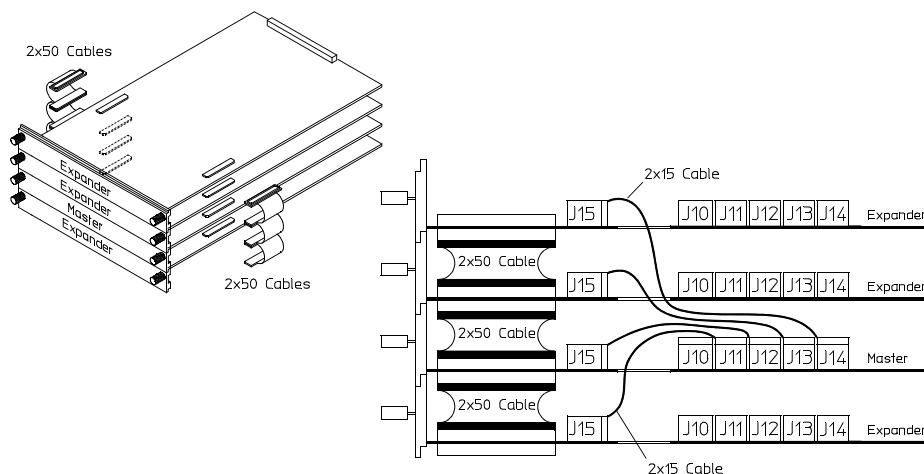

#### NOTE

You can combine any combination of 16753A, 16754A, 16755A, 16756A, and 16950A logic analyzer modules in a 4-card set.


The combined set will default to the lowest memory depth in the set.

## 16950A, 16756/55/54/53A Logic Analyzer (5-card module)

Use five 2 x 15 cables and eight 2 x 50 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

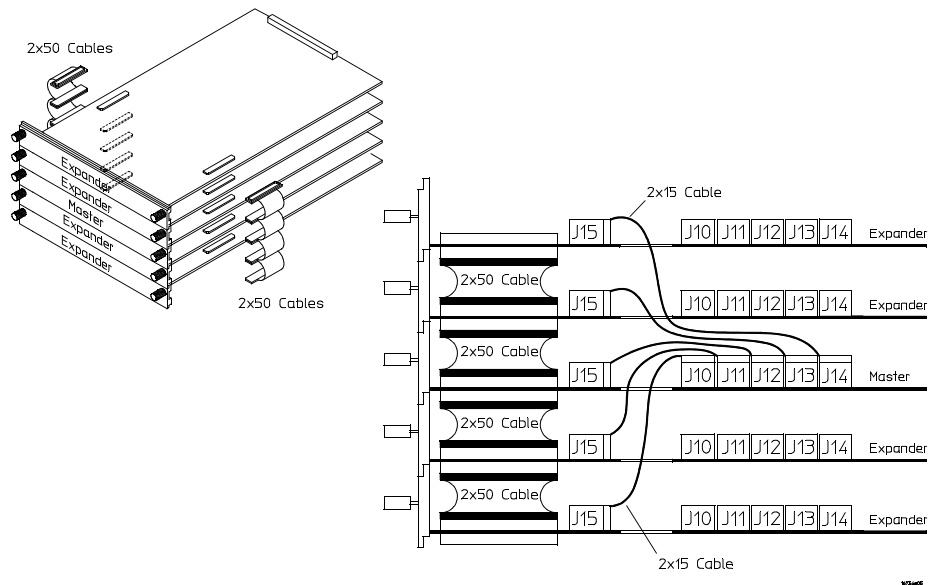

### NOTE

You can combine any combination of 16753A, 16754A, 16755A, 16756A, and 16950A logic analyzer modules in a 5-card set.


The combined set will default to the lowest memory depth in the set.

# 16911A/10A Logic Analyzer (1-card module)


Each card shipped stand-alone has the 2 x 15 cable connected in the single-card module configuration. The 2 x 50 cables in the accessory pouch are not used. A single-card module can be installed in any available slot.

**NOTE**


Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

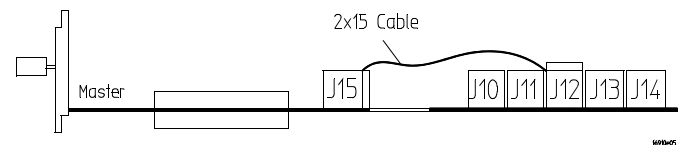

The order of pods on the 16910A logic analyzer card's rear panel is:



The order of pods on the 16911A logic analyzer card's rear panel is:




In a multi-card set, pods are indexed starting with the master card, then with the expander cards from the bottom up.

## 16911A/10A Logic Analyzer (2-card module)

Use two 2 x 15 cables and two 2 x 50 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

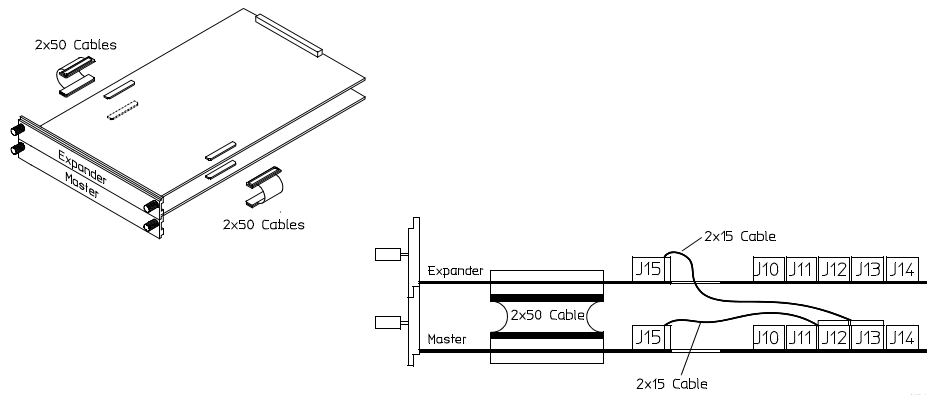

### NOTE


You can combine the same model numbers only (16910A in a 2-card set or 16911A in a 2-card set). The combined set will default to the lowest state speed and memory depth in the set.

### 16911A/10A Logic Analyzer (3-card module)

Use three 2 x 15 cables and four 2 x 50 cables (in the accessory pouch) to connect the modules.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

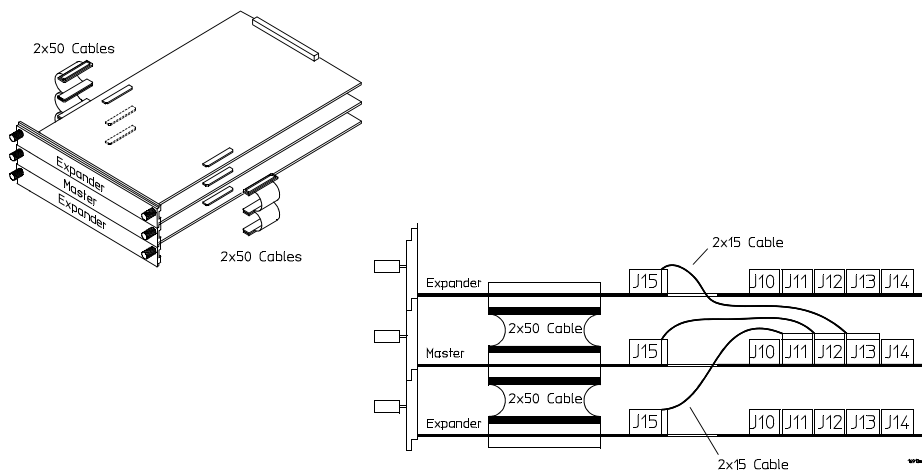

#### NOTE

You can combine the same model numbers only (16910A in a 3-card set or 16911A in a 3-card set). The combined set will default to the lowest state speed and memory depth in the set.




## 16911A/10A Logic Analyzer (4-card module)

Use four 2 x 15 cables and six 2 x 50 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

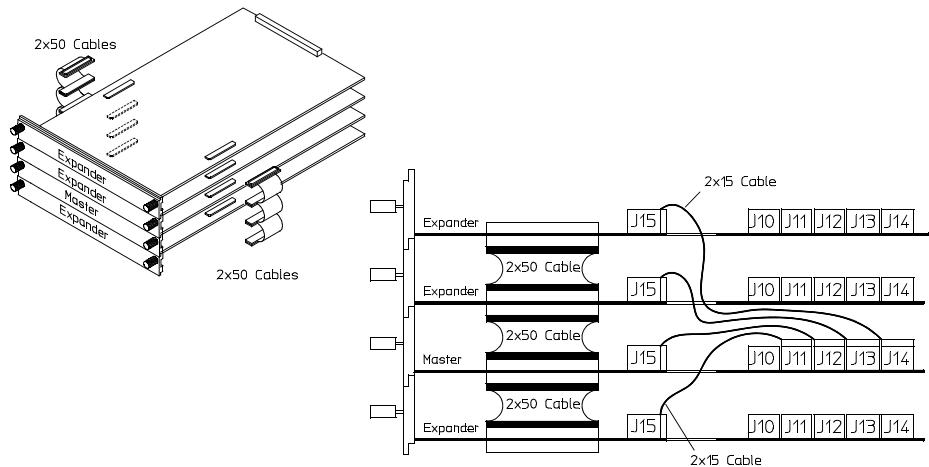

### NOTE


You can combine the same model numbers only (16910A in a 4-card set or 16911A in a 4-card set). The combined set will default to the lowest state speed and memory depth in the set.

### 16911A/10A Logic Analyzer (5-card module)

Use five 2 x 15 cables and eight 2 x 50 cables (in the accessory pouch) to connect the modules.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

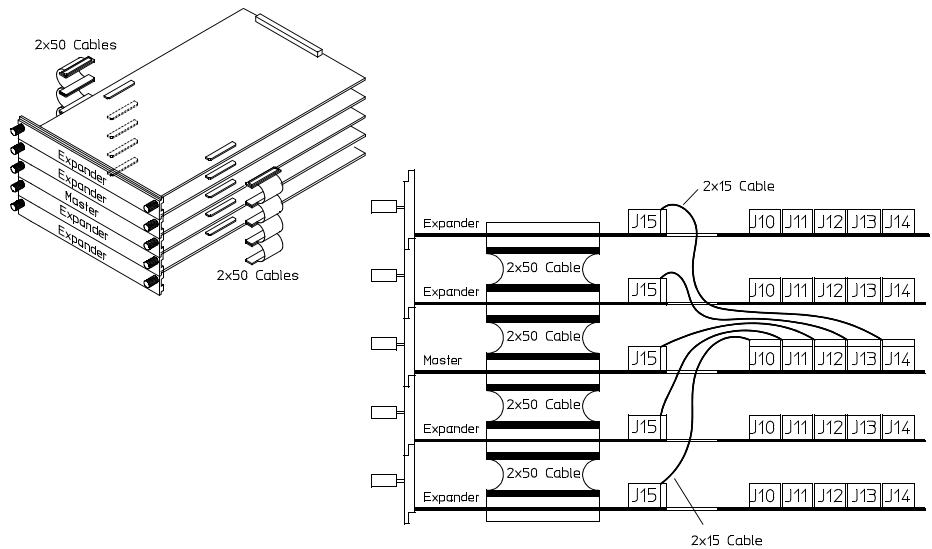

#### NOTE


You can combine the same model numbers only (16910A in a 5-card set or 16911A in a 5-card set). The combined set will default to the lowest state speed and memory depth in the set.

## 16760A Logic Analyzer (1-card module)


A single 16760A logic analyzer module will have the 2 x 10 cable connected in the single-card configuration.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules following the procedures on [page 26](#).



The order of pods on the card's rear panel is:




In a multi-card set, pods are indexed starting with the master card, then with the expander cards from the bottom up.

### 16760A Logic Analyzer (2-card module)

Use two 2 x 10 cables and two 2 x 40 cables (in the accessory pouch) to connect the modules.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules following the procedures on [page 26](#).

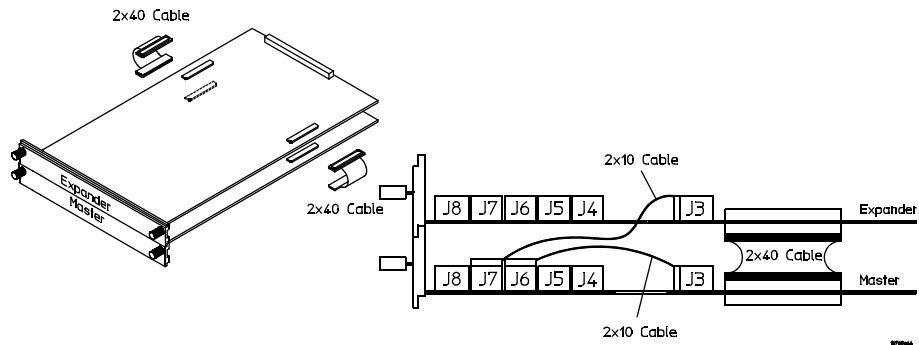


## 16760A Logic Analyzer (3-card module)

Use three 2 x 10 cables and four 2 x 40 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules following the procedures on [page 26](#).

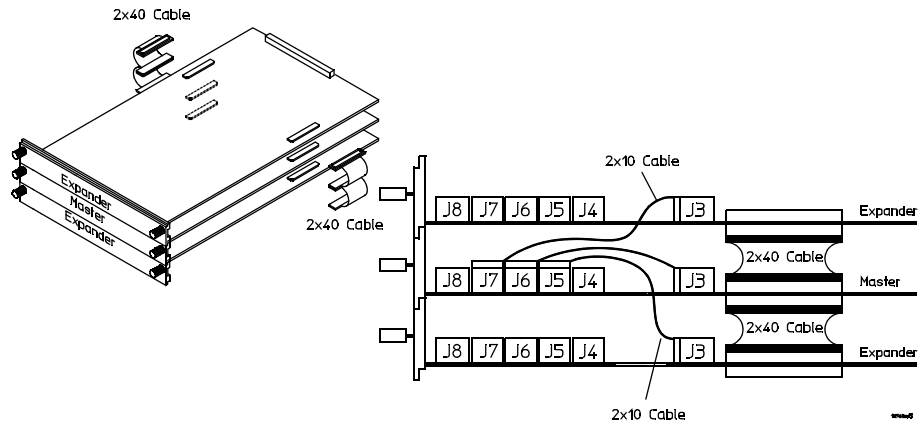


### 16760A Logic Analyzer (4-card module)

Use four 2 x 10 cables and six 2 x 40 cables (in the accessory pouch) to connect the modules.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules following the procedures on [page 26](#).

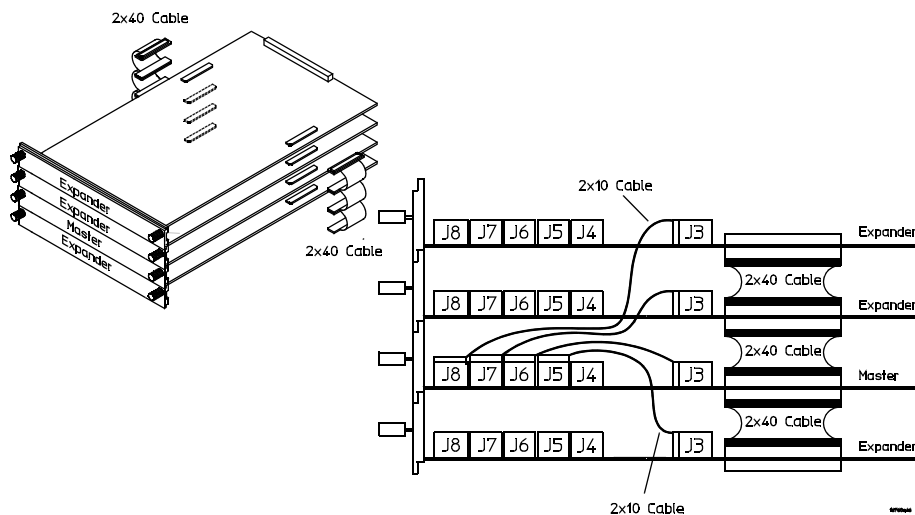


## 16760A Logic Analyzer (5-card module)

Use five 2 x 10 cables and eight 2 x 40 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules following the procedures on [page 26](#).

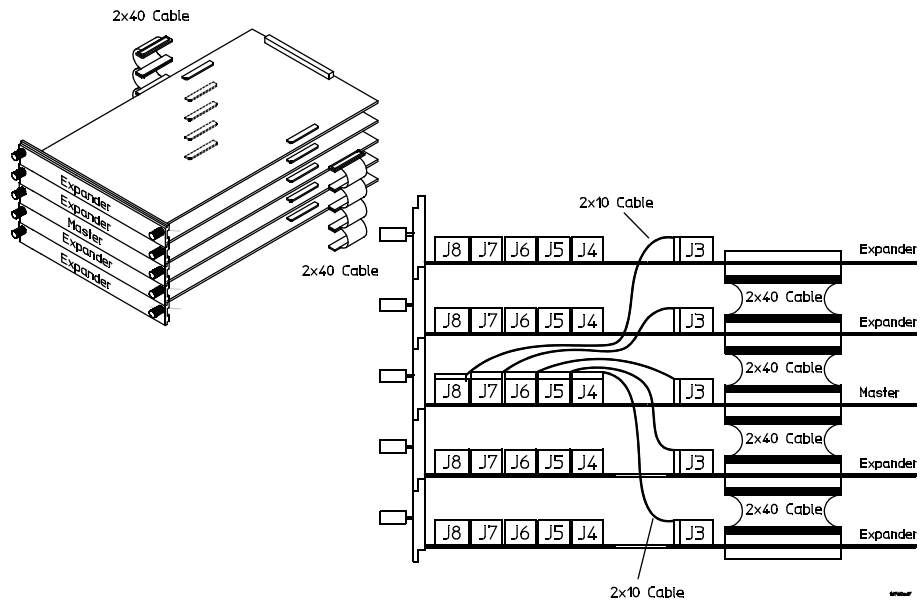


### 16752/51/50B/A, 16742/41/40A Logic Analyzer (1-card module)


Each card shipped stand-alone has the 2 x 10 cable connected in the single-card module configuration. A single-card module can be installed in any available slot.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

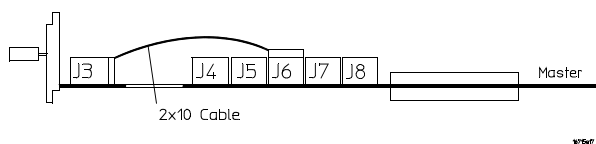

The order of pods on the card's rear panel is:



In a multi-card set, pods are indexed starting with the master card, then with the expander cards from the bottom up.




## 16752/51/50B/A, 16742/41/40A Logic Analyzer (2-card module)

Use two 2 x 10 cables and two 2 x 40 cables (in the accessory pouch) to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

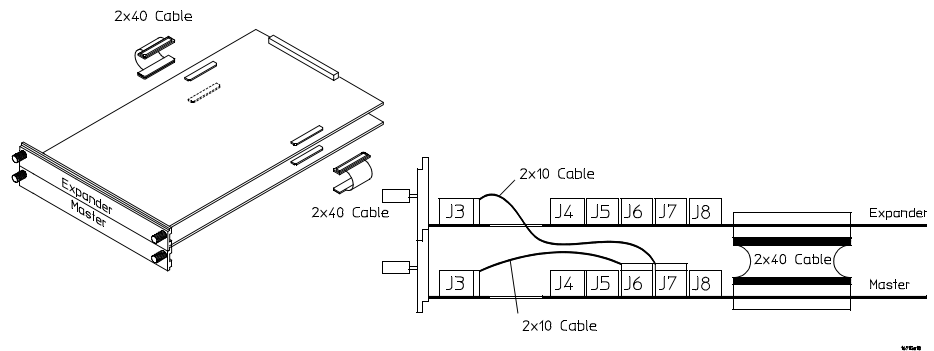

### NOTE


Measurement modules with different model numbers cannot be connected together in multi-card modules. However, the 16750A may be connected to a 16750B; the 16751A may be connected to a 16751B; the 16752A may be connected to a 16752B.

### 16752/51/50B/A, 16742/41/40A Logic Analyzer (3-card module)

Use three 2 x 10 cables and four 2 x 40 cables (in the accessory pouch) to connect the modules.

#### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

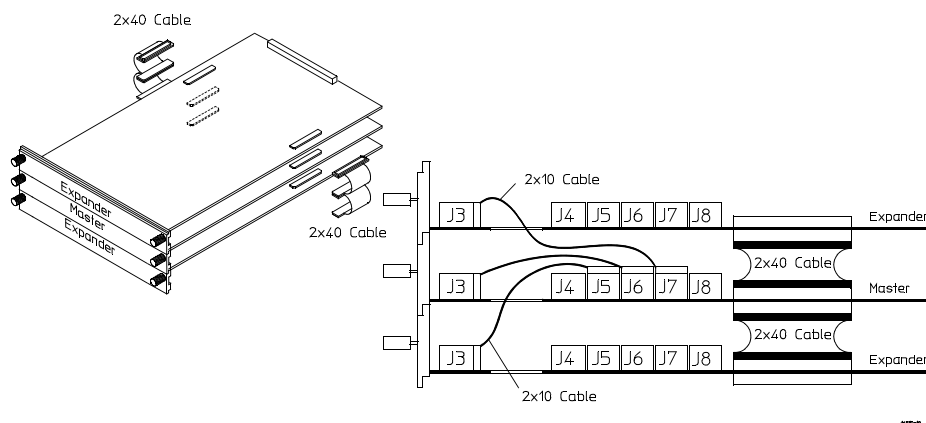

#### NOTE


Measurement modules with different model numbers cannot be connected together in multi-card modules. However, the 16750A may be connected to a 16750B; the 16751A may be connected to a 16751B; the 16752A may be connected to a 16752B.

## 16752/51/50B/A, 16742/41/40A Logic Analyzer (4-card module)

Use four 2 x 10 cables and six 2 x 40 cables (in the accessory pouch) to connect the modules.

### NOTE


Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

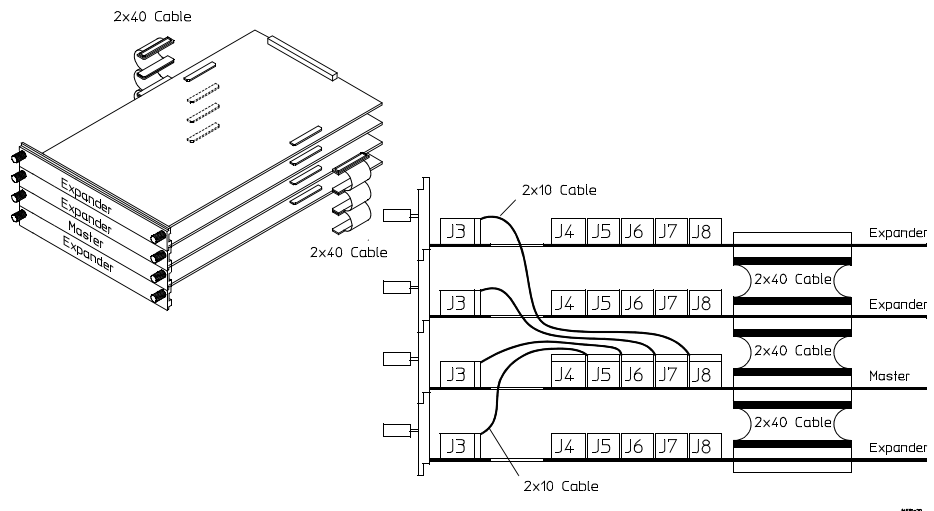

### NOTE

Measurement modules with different model numbers cannot be connected together in multi-card modules. However, the 16750A may be connected to a 16750B; the 16751A may be connected to a 16751B; the 16752A may be connected to a 16752B.



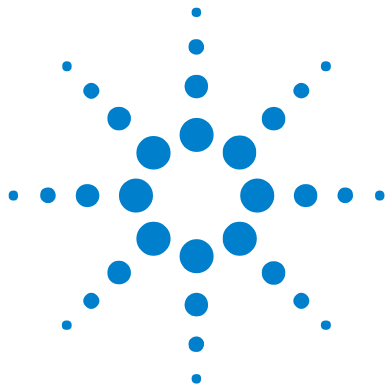

### 3

## Installing Pattern Generator Cards

Software Requirements	62
16720A Pattern Generator (1-card module)	63
16720A Pattern Generator (2-card module)	64
16720A Pattern Generator (3-card module)	65
16720A Pattern Generator (4-card module)	66
16720A Pattern Generator (5-card module)	67



# Software Requirements

The following table gives you the Agilent Logic Analyzer software version required for pattern generator measurement modules in the 16900A, 16902A, 16902B, or 16903A frames. For the software version required by frames, see [Table 2](#) on page 23. For information on updating your logic analysis system software go to [“To install software”](#) on page 95.

**Table 4** Software Version Required, Pattern Generator Modules


Model Number	Software Version
16720A	03.00 or higher

## 16720A Pattern Generator (1-card module)


Each card shipped stand-alone has the 2 x 10 cable connected in the single-card module configuration. A single-card module can be installed in any available slot.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

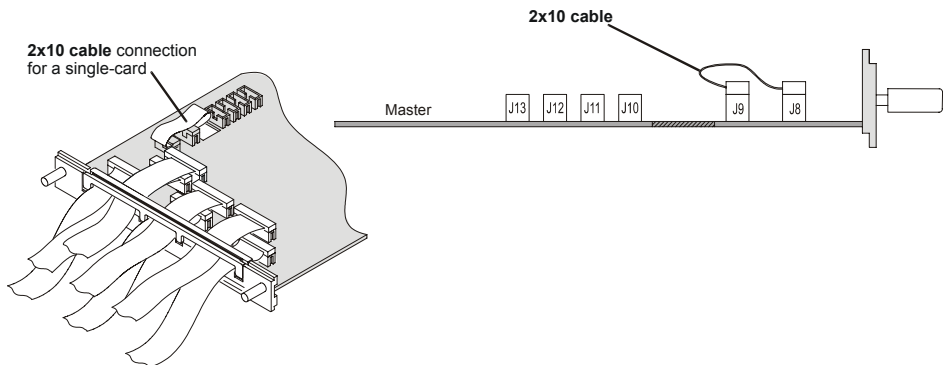

The order of pods on the card's rear panel is:




In a multi-card set, pods are indexed from the bottom up.

## 16720A Pattern Generator (2-card module)

Use two 2 x 10 cables to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

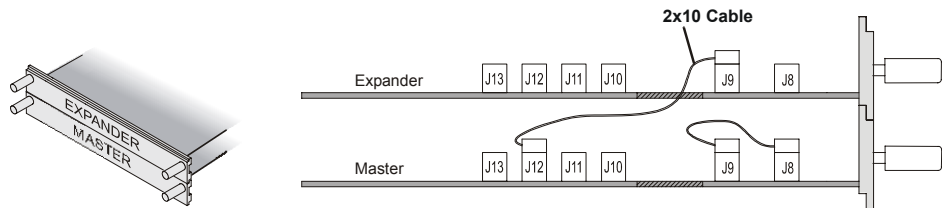




## 16720A Pattern Generator (3-card module)

Use three 2 x 10 cables to connect the modules.

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

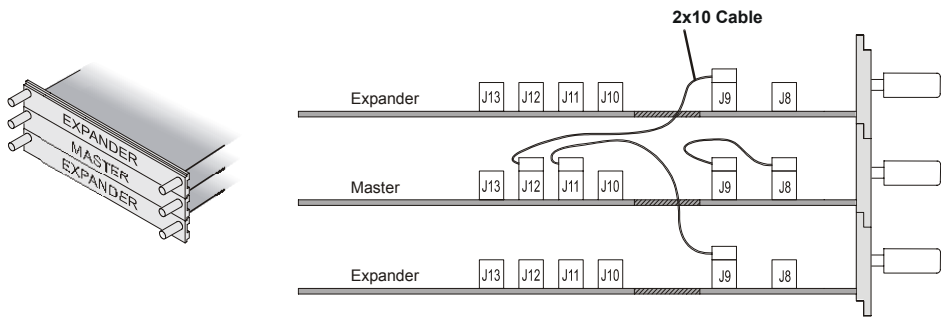


## 16720A Pattern Generator (4-card module)

### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

- 1 Carefully slide the 4 cards half way into the mainframe slots.
- 2 Use four 2 x 10 cables to connect the modules. Cable the bottom Expander Card to the Master Card first. Then cable the upper two Expander Cards to the Master Card.
- 3 Gently slide the cabled assembly fully into the frame and tighten the thumb screws.

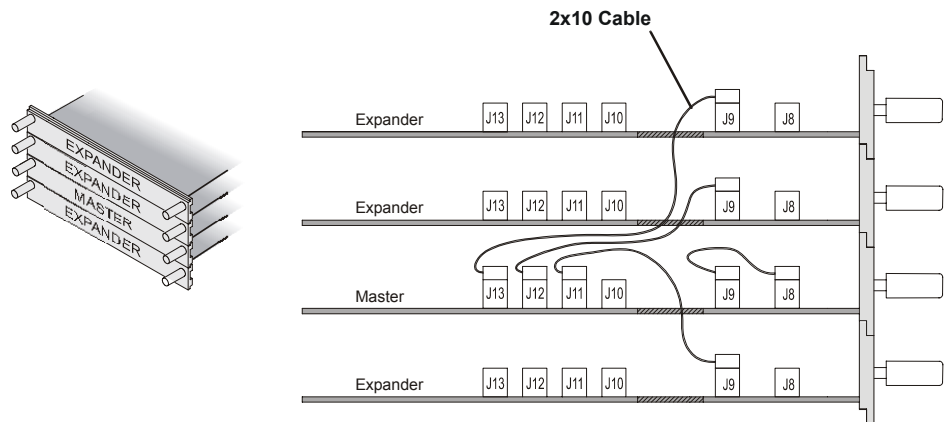


## 16720A Pattern Generator (5-card module)


### NOTE

Turn off the mainframe power before removing, replacing, or installing modules. For instructions on installing modules into the logic analysis system frame, refer to [page 26](#).

- 1 Carefully slide the 4 cards half way into the mainframe slots.
- 2 Use five 2 x 10 cables to connect the modules. Cable the bottom two Expander Cards to the Master Card first. Then cable the upper two Expanders to the Master Card.
- 3 Gently slide the cabled assembly fully into the frame and tighten the thumb screws.

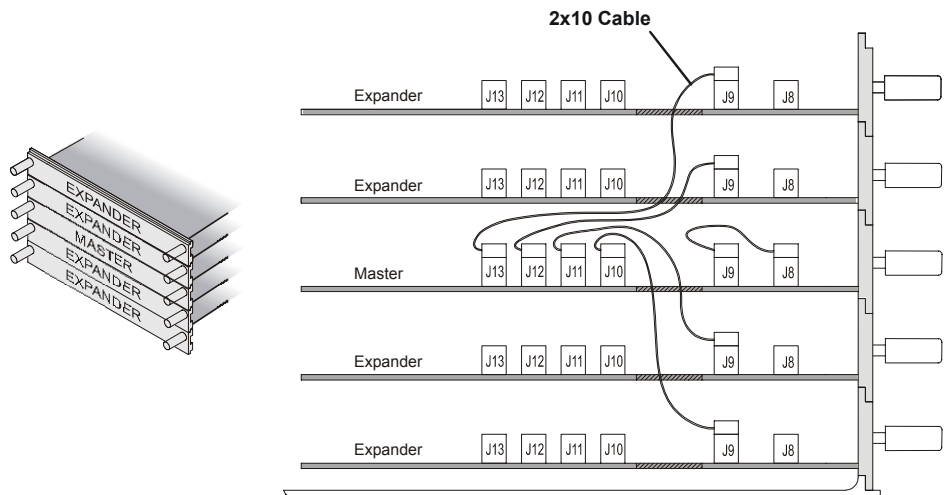

### **3 Installing Pattern Generator Cards**

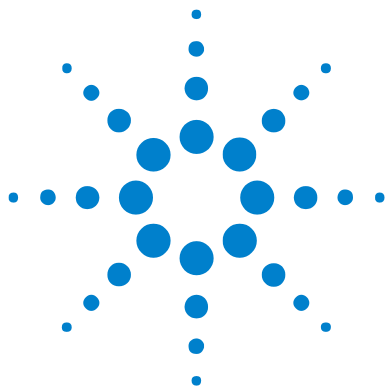

## 4 First-Time Set Up

First-Time Set Up Considerations	70
Answering Windows Welcome Questions	72
Additional First Time Setup Steps	74



### First-Time Set Up Considerations

The first time you turn on the logic analysis system, the Windows Welcome session starts. Your logic analyzer configuration and the answers to the Windows Welcome questions are affected by how you choose to use the logic analyzer.

#### NOTE

Use the Enter and arrow keys on the attached keyboard. The logic analyzer front-panel keys do not work until Windows is running.

---

### Determine Whether the Instrument will be Connected to the Network

#### NOTE

If you plan to use COM automation to programmatically control a logic analysis system from a remote computer, be aware that the remote computer and the logic analysis system must both have the same kind of network membership; that is, they must both be members of a "Workgroup", or they must both be members of a "Domain". This is due to the security requirements of Distributed COM.

---

#### Standalone

You are going to use the logic analysis system as a standalone instrument (no LAN connection). Printing requires a printer attached to the logic analyzer, sharing files is done via CD, USB flash drive, etc.

#### Connected to a Network

If you require the ability to print, share files, remotely control the logic analyzer, etc. over the network, you need to either join a workgroup or domain.

### Get Network Setup Information

For networking, find out whether the network that your instrument will be connected to uses the Microsoft Workgroup model or Microsoft Domain model. In order for your instrument to perform tasks over the network (print, transfer files, etc.) your instrument must be configured appropriately for the networking model in use at your site.

Information you may require to complete your network configuration may include, but is not limited to,

- The Workgroup or Domain name.
- Methodology for assigning IP addresses at your site (for example, DHCP).
- Domain Name Service (DNS). This can also be obtained automatically.
- Other network information that may be readily available from your network administrator.

## Answering Windows Welcome Questions

Once you have determined how you want to use your logic analyzer and your network configuration, power up your logic analyzer and answer the Windows Welcome questions.

**Table 5** Answering Windows Welcome Questions

	Standalone (No LAN)	Workgroup	Domain
Help protect your PC	N/A	Choose "Help protect my PC by turning on Automatic Updates now".	Choose "Help protect my PC by turning on Automatic Updates now".
What's your computer's name? (After answering, wait several minutes for next question to appear)	If your organization has a standard naming scheme, use that scheme. Otherwise, choose a descriptive name that follows the suggestions on the screen (less than 15 characters, etc.)		
What's your administrator password?	Agilent recommends entering an administrator password for administrator accounts. See <a href="#">page 74</a> for actions that require administrator accounts.		
Is this computer in a domain?	No (Is given WORKGROUP membership)	No (Is given WORKGROUP membership)	Yes Enter the domain name the logic analysis system will log onto.
Enter your domain settings.	N/A	N/A	Enter the name/password of a user who can add the logic analysis system to the domain.
Checking your Internet connectivity	Press 'Skip'	Wait for this to finish.	Wait for this to finish.
How will this computer connect to the Internet?	N/A	N/A	Choose the appropriate answer.
Setting up a high-speed connection?	N/A	N/A	Enter either the fixed IP/DNS assigned by your network administrator or select "Obtain Automatically".



**Table 5** Answering Windows Welcome Questions (continued)

	Standalone (No LAN)	Workgroup	Domain
(If LAN connected) Will this computer connect to the Internet directly, or through a network?	N/A	Choose "Yes, through a network" (Agilent does not support connecting to the internet through a modem directly connected to the logic analyzer.)	N/A
(If LAN is not connected) Windows unable to determine LAN connectivity.	N/A	You are told to set up LAN later.	N/A
Ready to register with Microsoft	Windows XP is already enabled to run on the logic analyzer. This registration is to allow Microsoft to contact you.		
Who will use this computer?	For All: Entering names here lets multiple users use the logic analyzer with administrator permissions. By default their passwords will be blank.		

### If expected Windows Welcome questions do not appear

During first-time power-up, depending on the configuration of your network, some of the Windows Welcome questions that should appear, like "Is this computer in a domain?", may not appear.

If this occurs, you need to change the logic analysis system's network setup (after the first-time power up) using the normal Windows XP methods (see ["To change network settings"](#) on page 96).

## **Additional First Time Setup Steps**

### **Establishing an Administrator Account (recommended for standalone and networked instruments)**

Agilent recommends that you set up an Administrator account for your logic analysis system. You have to be logged in to the Administrator account to do the following:

- Install most software (applies whether the instrument is networked or standalone).
- Change the workgroup.
- Perform "Windows Updates".
- Change firewall settings.

### **Protecting the Instrument's Operating System**

Microsoft recommends the following three steps to ensure the instrument's PC is protected.

- 1** Use an internet firewall.
- 2** Get operating system updates.
- 3** Use up-to-date antivirus software.



## 5 Setting Up Multiframe Configurations

Setting Up Simple Multiframe Configurations 76

Setting Up a Performance Multiframe Configuration 84

Other Multiframe Configuration Notes 89

If you need to make time-correlated measurements with more logic analysis channels than can be installed into a single logic analysis system frame, you can connect multiple 16900A, 16901A, 16902A, and 16902B frames together in a multiframe logic analysis system.

### Guidelines for Configuring a Multiframe System


- You must use the same speed networking card in all frames.
- If a frame has two LAN ports, Agilent recommends only one be used.
- Use the highest network speed available.
- If possible, use a switch (as opposed to a hub) to isolate traffic between frames from the rest of the network.



### Setting Up Simple Multiframe Configurations


Simple multiframe configurations are useful when you are using one or more logic analysis systems in a variety of configurations where sometimes you are using them as distinct analyzers and sometimes you need to use them as a multiframe system to correlate a variety of buses.

## Simple 100 Base-T Multiframe Configuration

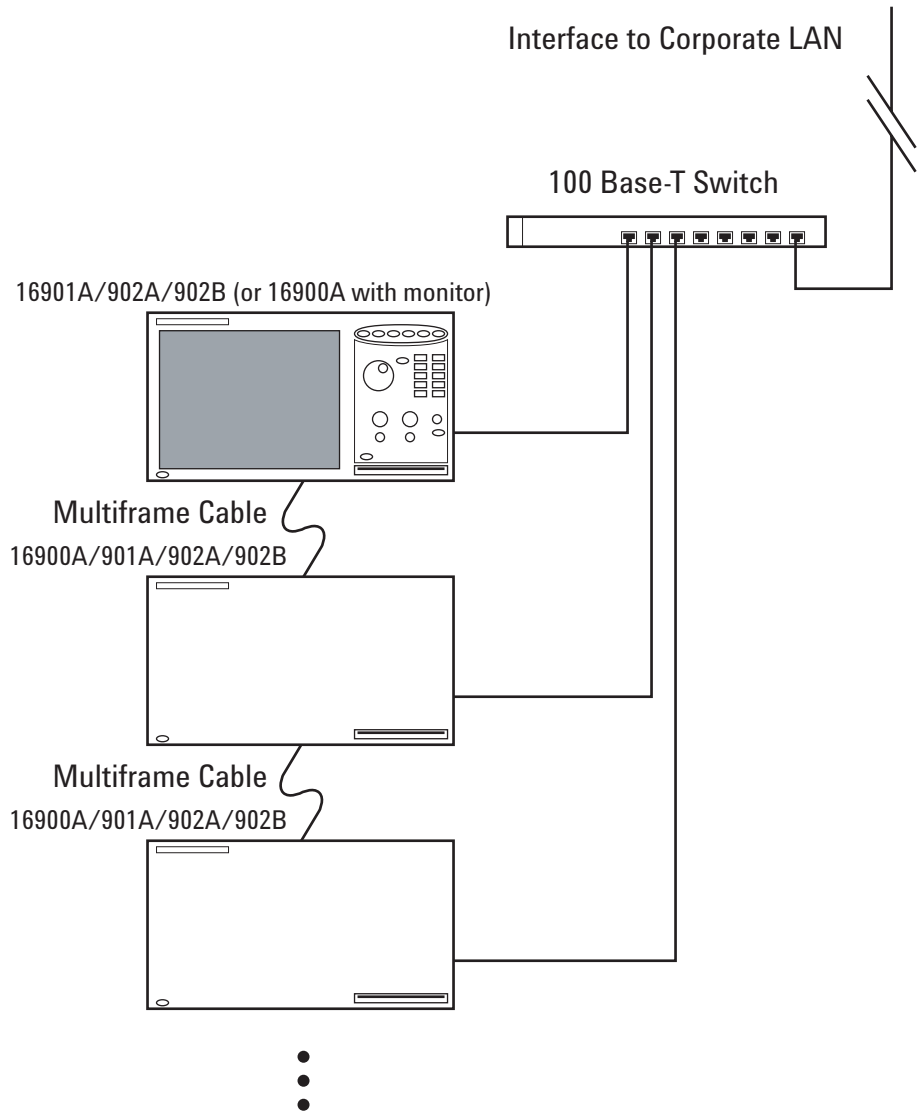

In the simple 100 Base-T multiframe configuration, all of the frames are connected to the network using their 100 Base-T LAN port.

# Simple 1000 Base-T Multiframe Configuration

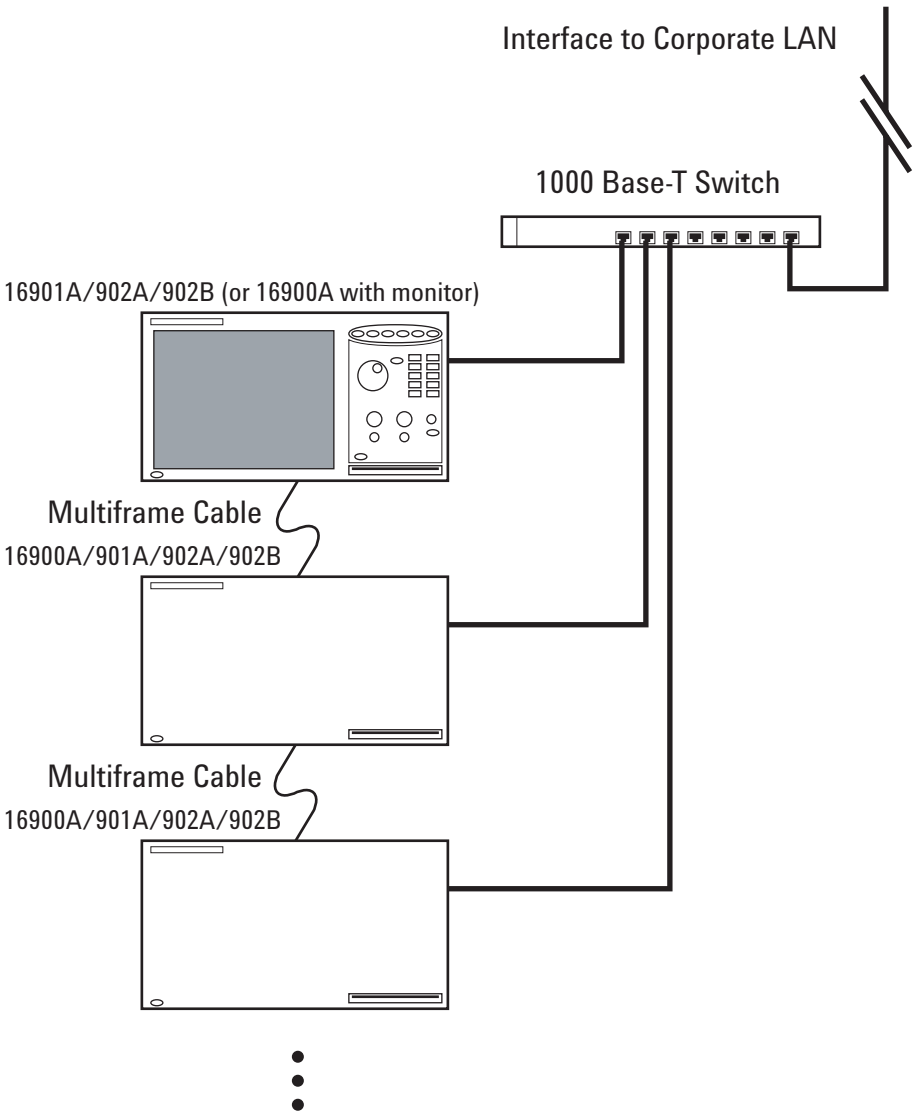

In the simple 1000 Base-T multiframe configuration, all of the frames are connected to the network using their 1000 Base-T LAN port.


## Rules for Simple Multiframe Configurations

In addition to the earlier guidelines on [page 75](#):

- Choose one of the frames to run the *Agilent Logic Analyzer* application on. If you only run the application on one frame, all your configurations will be there (and will be easier to find). Also, there are I/O and node-locked license file advantages when the application is run on one frame (see [“Other Multiframe Configuration Notes”](#) on page 89).
- A network switch (as opposed to a hub) can be used to isolate traffic between frames and improve performance, but it is not required.

## Creating Simple Multiframe Configurations

- 1 Make sure all frames are connected to the corporate LAN in the same way:
  - All frames should be members of the same Domain, or they should all be members of the same Workgroup. To get the frames properly connected to the LAN, see [Chapter 4](#), “First-Time Set Up,” starting on page 69 or [“To change network settings”](#) on page 96.
  - Use the same LAN port type on all frames to connect to the corporate LAN.
- 2 Power off all logic analysis system frames.
- 3 Connect multiframe cable(s) between the frames as shown.

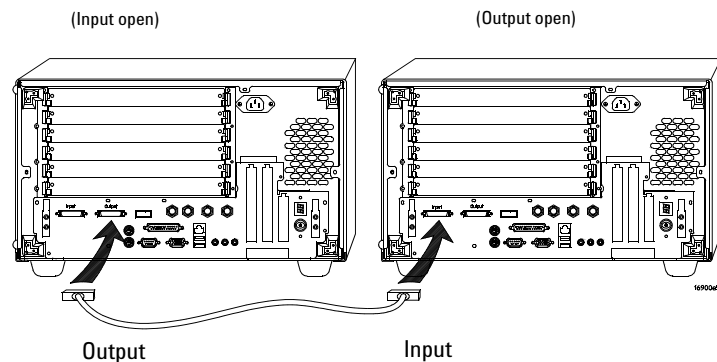

One frame's output is connected to the next frame's input, and so on.

## 5 Setting Up Multiframe Configurations

### 4 Power up all frames.

As the operating system loads, it will:


- Configure the connection to the corporate LAN.
- Start various services.
- Start the logic analyzer service.

### 5 Log in to the frame you chose to run the *Agilent Logic Analyzer* application on, and wait for the application to start.

#### NOTE

Depending on your multiframe connection topology, it may take several seconds for the *Agilent Logic Analyzer* application to start.

If the application starts without errors, and you see the multiframe system in the Overview window, you are ready to use the multiframe system.

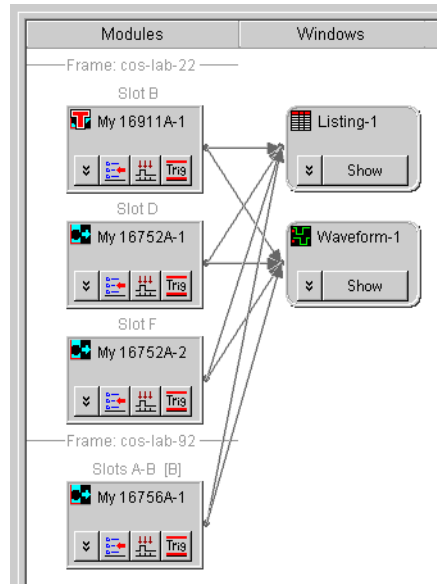



- 6 If you are not able to see the multiframe system in the Overview window, do the following:
  - a Exit the *Agilent Logic Analyzer* application.
  - b Power down all frames.
  - c Disconnect and reconnect the multiframe cables to all frames. Make sure the output of one frame is connected to the input of the next.
  - d Power up the frames.
  - e When all frames have been powered up, log in to the frame you chose to run the *Agilent Logic Analyzer* application on, and wait for the application to start.
- 7 If the multiframe system still does not appear in the Overview window, check these potential problems:
  - a Validate that you have properly configured the network setup on each of the frames. All frames must be able to communicate with each other over the multiframe cable and over the LAN.
  - b Validate that all frames can communicate with the corporate LAN.
  - c Validate that the firewalls are enabled on the corporate LAN connection and that they have the proper permissions (see “[To restore the logic analysis system firewall defaults](#)” on page 99). To test for firewall problems you could temporarily disable the firewall in the analyzers and repeat [step 6](#).

## Remotely Controlling Simple Multiframe Systems

If you want to control the multiframe logic analysis system remotely, there are two options:


- Use one of the remote window utilities to remotely control the frame that runs the *Agilent Logic Analyzer* application. Choose from Remote Desktop, RealVNC, or NetOp. With this option:
  - You are not sending as much LAN traffic between the multiframe logic analysis system and your local PC.
  - Set up the remote options on your local PC to properly control the logic analysis system.

If you are not in the same building as the multiframe logic analysis system, you will typically want to use this option.

## 5 Setting Up Multiframe Configurations

- Run the *Agilent Logic Analyzer* application on your remote PC and connect to the multiframe system by going online and connecting to the frame. With this option:
  - Your performance may vary because analyzer data from all logic analysis frames must be sent over LAN to your locally running application.

### Simple 2-Frame w/Crossover Cable Configuration

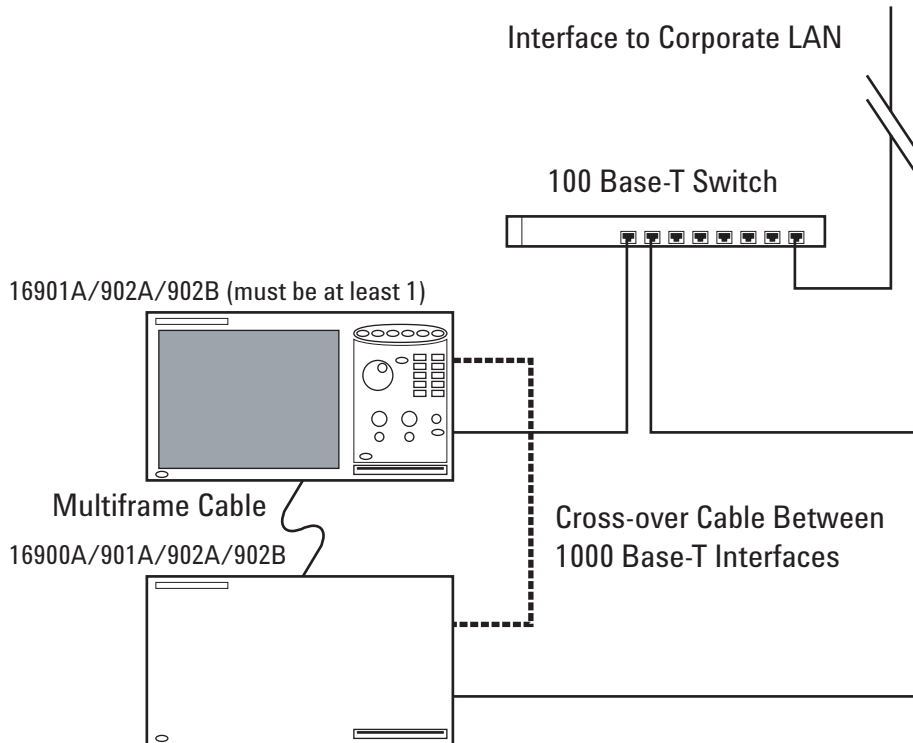

When you have only two frames in the simple 100 Base-T multiframe configuration (see [page 77](#)), you can gain performance by connecting a crossover cable between the frames' 1000 Base-T ports and configuring these ports with static IP addresses.

If you have a 1000 Base-T switch, use the simple 1000 Base-T multiframe configuration instead (see [page 78](#)).

### Creating a Simple 2-Frame w/Crossover Cable Configuration

- 1 Set up the two frames in the simple 100 Base-T multiframe configuration by following the instructions in [“Creating Simple Multiframe Configurations”](#) on page 79.
- 2 If the *Agilent Logic Analyzer* application is running on one of the frames, exit the application.
- 3 Connect a special cross-over LAN cable between the two frames’ 1000 Base-T LAN ports.
- 4 Make sure the frames’ 1000 Base-T LAN ports are enabled, and manually set up static IP addresses for them in the network connection’s Internet Protocol (TCP/IP) Properties dialog. Use IP addresses in the link-local address range (169.254.xxx.xxx). Make sure the static IP address is different for each frame; for example, use 169.254.192.0 for one frame and 169.254.192.1 for the other. (Proper subnet masks, 255.255.0.0, are automatically filled-in.)


#### NOTE

Use static IP addresses on the frames’ 1000 Base-T LAN ports to greatly improve the *Agilent Logic Analyzer* application start up time.

---

- 5 After the static IP addresses for the frames’ 1000 Base-T LAN ports have been configured, wait about 10 seconds for the logic analyzer service to restart.
- 6 Start the *Agilent Logic Analyzer* application, and verify that the multiframe system appears in the Overview window.

# Setting Up a Performance Multiframe Configuration

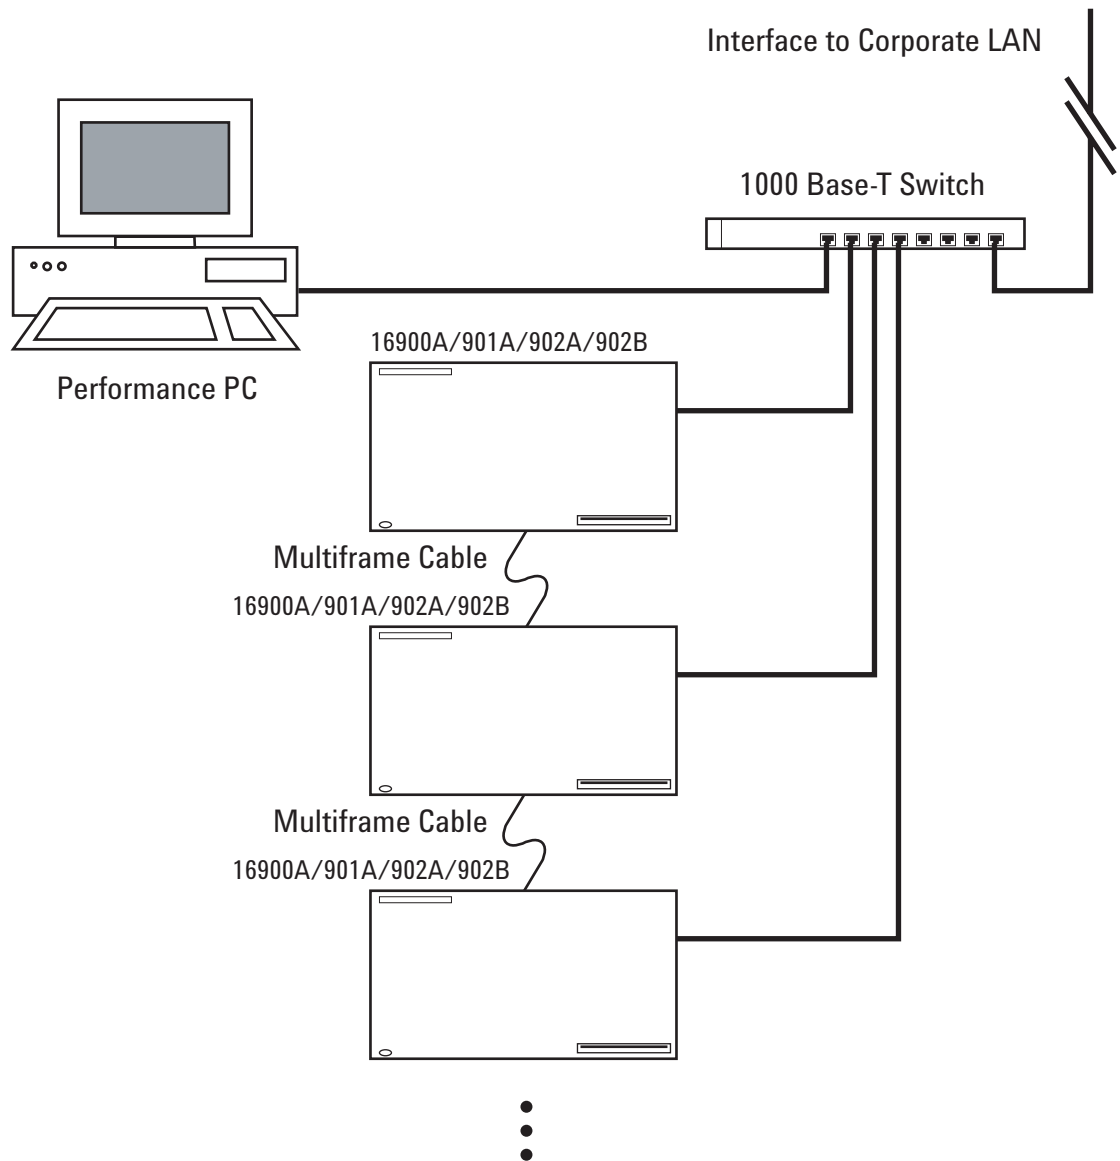

In the performance multiframe configuration, you run the *Agilent Logic Analyzer* application on a high-performance PC or server. This is useful if you trying to maximize multiframe logic analysis system performance.

## Rules for Performance Multiframe Configurations

In addition to the earlier guidelines on [page 75](#):

- You must use the 1000 Base-T LAN port in all frames; the 100 Base-T LAN ports must be disconnected, with no cable plugged-in
- The performance PC must have a 1000 Base-T LAN port.
- If the corporate LAN is not 1000 Base-T, or if the corporate LAN is heavily-used, use a 1000 Base-T switch (as opposed to a hub) to isolate multiframe system traffic.
- Frames can be a mix of 16900A, 16901A, 16902A, and 16902B frames (or all one type).
- The *Agilent Logic Analyzer* application runs on the performance PC.

## Creating a Performance Multiframe Configuration

- 1 Use a performance PC that can be dedicated to the multiframe setup.
- 2 Install the *Agilent Logic Analyzer* application on the performance PC. Make sure that the version you install on the performance PC is the same version as on all logic analysis system frames.
- 3 Make sure that all logic analysis system frames have a login screen and do not auto login upon power up.

Auto login occurs when the frames have been initialized with only one user, with no password, and are not connected to a Domain.

If any frame is in this state, add a second user, add a password, or add the frame to a Domain so that a login screen is presented at power up.


- 4 Connect the performance PC and all frames to the corporate LAN. To get the frames properly connected to the LAN, see [Chapter 4](#), “First-Time Set Up,” starting on page 69 or “[To change network settings](#)” on page 96.
  - Make sure all frames are connected to the corporate LAN and are recognized before continuing.

## 5 Setting Up Multiframe Configurations

- Because the *Agilent Logic Analyzer* application runs on the performance PC connected remotely to a frame, the frame's front panel knobs and buttons are not functional.

5 Power down all of the frames and the performance PC.

6 Connect multiframe cables between the frames as shown.

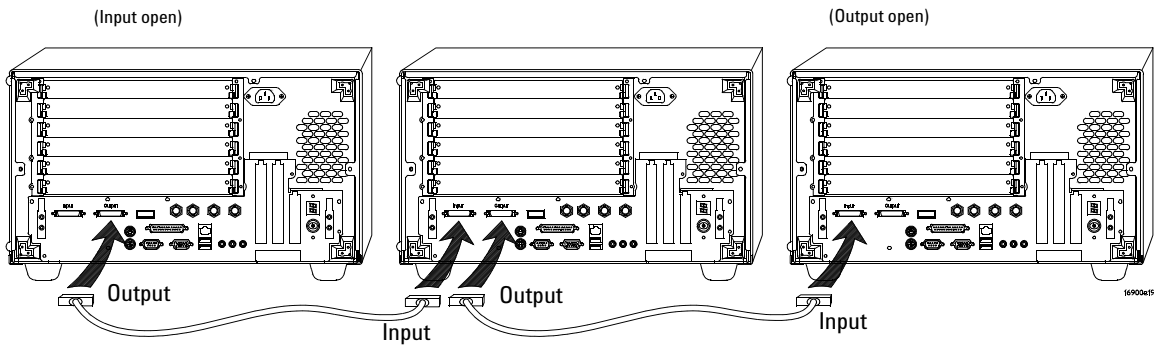

One frame's output is connected to the next frame's input. Connect multiple frames in sequence with the final frame having no output connected.


7 Power up all frames.

As the operating system loads, it will:

- Configure the corporate LAN connection.
- Start various services.
- Start the logic analyzer service.

8 Log in to one of the frames, and wait for the *Agilent Logic Analyzer* application to start.

If the application starts without errors, and the multiframe system appears in the Overview window, you are almost ready to use the multiframe system.

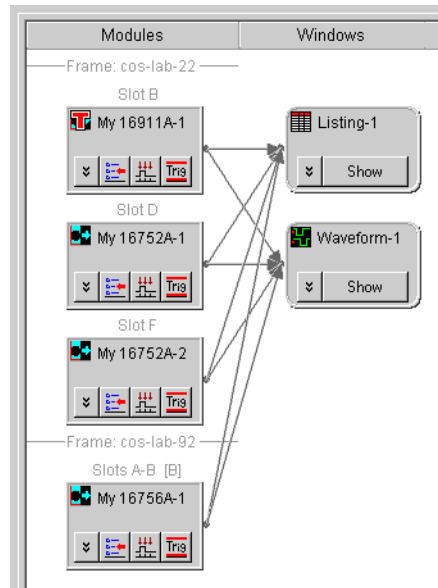

Exit the application, and continue on [step 10](#).

- 9 If you are not able to see the multiframe system in the Overview window on the frame, do the following:
  - a Exit the *Agilent Logic Analyzer* application.
  - b Power down all frames.
  - c Disconnect and reconnect the multiframe cables between all frames.
  - d Power up all frames.
  - e Log into one of the frames, and start the *Agilent Logic Analyzer* application again. If it starts properly, then exit the application.

- 10 Power up the performance PC, log in, start the *Agilent Logic Analyzer* application, and connect to one of the frames remotely:
  - a When the application is starting and the Offline Startup Options dialog appears, click “Go Online...”.
  - b In the Select System to Use dialog, click “Add System”.
  - c In the Frame Host Name or IP Address dialog, enter the name of the frame, and click “OK”.
  - d Select the system that was just added and click “Details...”.
  - e In the Frame/Module Information dialog, click “Set as Auto-Connect”; then, click “OK”.

Now, each time you start the application on the performance PC it will auto-connect to that frame of the multiframe logic analysis system.

- 11 If you have trouble connecting to the frame, check these potential problems:
  - a Verify that the multiframe logic analysis system appears in the Overview window when running the *Agilent Logic Analyzer* application on one of the frames. If it does, then simply exit the application. If it does not, then fix the problem on that frame first.
  - b Verify that the firewalls on all frames are set up properly. This should allow the 16900 service to pass.
  - c On the performance PC, do not block outbound traffic to port 16900.
  - d The Refresh button in the Select System to Use dialog should show the status of the multiframe logic analysis system as “Available”.
  - e Verify that network addressing is correct on all frames.

You can do this by running “ipconfig” in a command prompt window.

### Remotely Controlling a Performance Multiframe System

If you want to control the performance multiframe system remotely, there is only one option:

- Use one of the remote window utilities to remotely control the performance PC. Choose from Remote Desktop, RealVNC, or NetOp. You will need to set up this service on your performance PC and your local PC.



## Other Multiframe Configuration Notes

Some other things to be aware of when using multiframe configurations:

- The multiframe cable is used for time correlation, cross-triggering, and multiframe setup; all other inter-frame communication takes place over LAN.
- Network interfaces need to see a direct path to the DHCP server. Otherwise, power-up times will be slow. Use static IP addresses if a direct path to the DHCP server is not available.
- If you are using two or more Network Interface Cards (NICs) in a frame, each NIC must be wired to a separate subnet so that the NICs do not directly see each other (as suggested by the multiframe configuration diagrams in this chapter). If the NICs do directly see each other, networking will not work well.

## I/O in Multiframe Configurations

- Trigger In/Trigger Out must be connected to whichever frame the *Agilent Logic Analyzer* application connects to.


## Licenses in Multiframe Configurations

If you are using probes, tools, or other application software that requires a license, and you are using node-locked licenses, install the node-locked licenses where the *Agilent Logic Analyzer* application runs:

- In the simple multiframe configurations, install node-locked licenses on the frame from which you run the *Agilent Logic Analyzer* application.
- In the performance multiframe configuration, install node-locked licenses on the performance PC.

If you are using floating licenses, the license server needs to be accessible from the frame or performance PC on which the *Agilent Logic Analyzer* application runs.



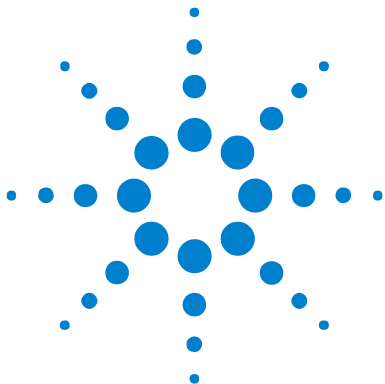

## 6 Using and Updating the Logic Analysis System


- To locate information on using the logic analyzer 92
- To locate specifications and characteristics 93
- To perform backups 95
- To install software 95
- To change network settings 96
- To change Windows Firewall settings 97
- To power off the system 102
- To remove the hard disk drive (16902B) 104
- To install interface cards (16900A, 16902A, 16902B, or 16903A) 105
- To install interface cards (16901A) 110
- To replace the CPU battery 113



# To locate information on using the logic analyzer

## Online Help

Go to online help for information on using your logic analyzer.

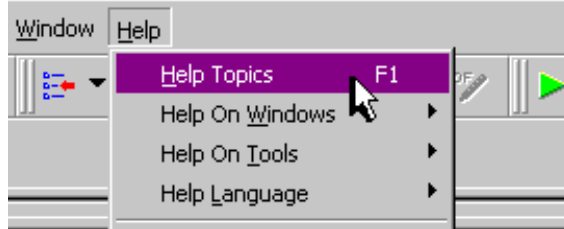


## Getting Started

Use the tutorial in on-line help to get an overview of logic analyzer basics. The measurement examples show you the typical order of steps to set up and run a measurement.

## Tips for Experienced Users

The *Quick Start for 16700 Series Users* provides experienced users of the 16700 Series logic analysis system with tips on how to quickly become productive with the new 16900 Series logic analysis system.

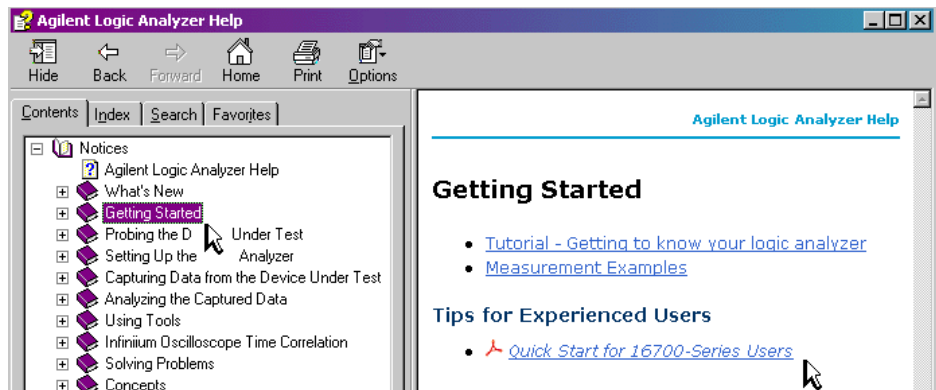

To locate specifications and characteristics

Electrical and Operating Environment Characteristics

The following operating characteristics are not specifications, but are typical operating characteristics for the Agilent 16900 Series logic analysis systems.

Electrical Characteristics	
Power Requirements	Frame(16900/902A): 115/230 Vac +/- 20%, 48-66Hz, 1300W Max Frame(16902B): 100/240 Vac, 47-63Hz, 1300W Max Frame(16903A): 115/230 Vac +/- 20%, 48-66Hz, 900W Max Frame(16901A): 115/230 Vac +/- 20%, 48-66Hz, 775W Max CAT II (Line voltage in appliance and to wall outlet) Pollution degree 2
Environmental Characteristics (Operating)	
Temperature	Instrument (16900A, 16902A, 16902B): 0° to + 40° C (+32° to +104° F) Instrument (16903A): 0° to + 50° C (+32° to +122° F) Instrument (16901A): 0° to + 45° C (+32° to +113° F) Disk Media: 10° to + 40° C (+50° to +104° F) Probes/cables: 0° to + 65° C (+32° to +149° F)
Altitude	3,000 m (10,000 ft)
Humidity	Relative humidity 8 to 80% at 40° C (104° F). Avoid sudden, extreme temperature changes which could cause condensation on the circuit board. For indoor use only.



Trigger In

The Trigger In connector is 5.5V Max pk and DC, CAT I (line isolated).




Clock In

The Clock In connector is 5.5V Max pk and DC, CAT I (line isolated).


### More Specifications and Characteristics

More specifications and characteristics for your instrument and measurement modules are in the online help. To find them go to:

- 1 Click **Help>Help Topics**.

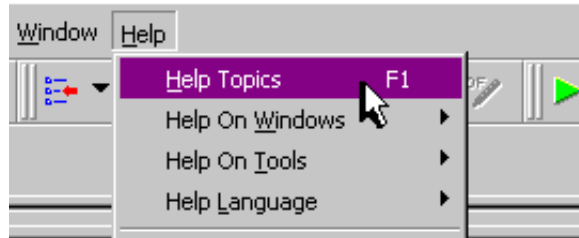

- 2 Click **Reference>Specifications and Characteristics**.

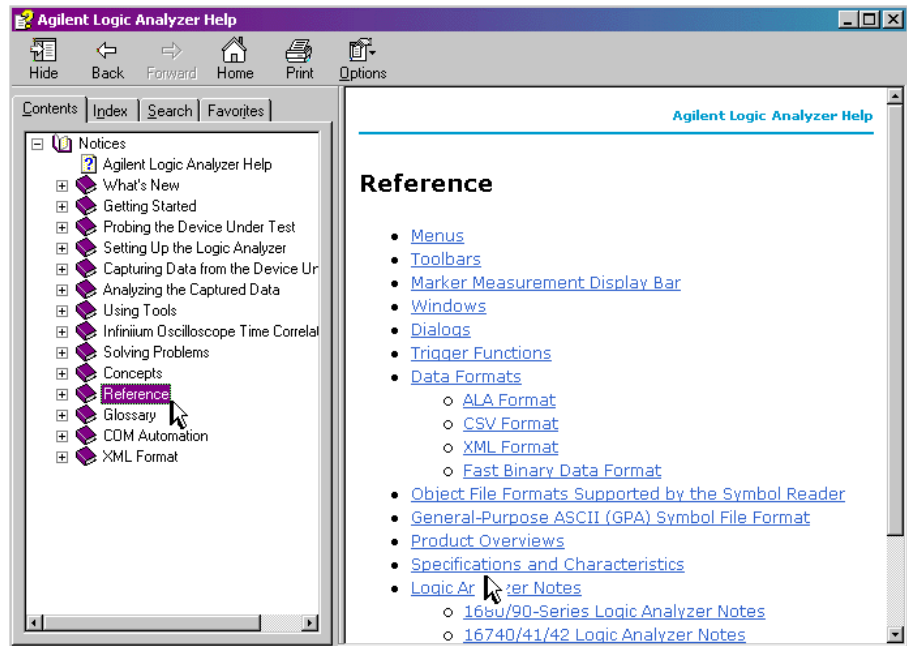

## To perform backups

Back up your information regularly to keep your archived data and files up-to-date. Use the Backup utility in Windows XP and back up to CD-Rs or to another machine.

## To install software

### Agilent Logic Analysis System Software

The Agilent 16900 Series logic analysis systems are shipped with software already installed, including any licensed optional products that you may have purchased. The licensing process (described below) has been performed and the (\*.lic) license file is in place.

To upgrade the logic analyzer software insert a product CD and click **INSTALL PRODUCTS>Install Logic Analyzer**. Note that newer versions of the Logic Analyzer software will automatically uninstall the previous version as a step in the upgrade. (User files in the "Documents and Settings" folder are not affected.)

To install the logic analyzer software onto your PC for offline processing, insert the product CD into your PC drive, click **INSTALL PRODUCTS>"Install Logic Analyzer**.

Logic analyzer product software can be downloaded from the web at:  
<http://www.agilent.com/find/la-sw-download>

Logic analyzer product CDs can be ordered from this web-site:  
<http://software.cos.agilent.com/LogicAnalyzerSW>

To be notified when software upgrades are available for downloading from the web, please sign up for e-mail notifications at:  
<http://www.agilent.com/find/emailupdates>

### Optional Products

If applicable, follow the instructions on the entitlement certificate that came with your purchase to enable the optional tool.

## To change network settings

To make network changes after the first-time power up:

- To change from a workgroup to a domain or vice versa, click **Start** then right click on **My Computer** and select **Properties**. Select the Computer Name tab and click **Change**.
- To change network connection properties, click **Start>Control Panel>Network Connections**. Select the connection you want to change and click **Change settings of this connection**.

For more information on changing network settings, refer to the Windows XP online help.



## To change Windows Firewall settings

When 16900 Series logic analysis systems are shipped from the factory, the Windows Firewall is enabled and set up with the exceptions required by the logic analysis system.


### To give other applications/ports access through the firewall

For example, you may need to change firewall settings in order to:


- Use NetOp to remotely control the logic analysis system.
- Use RealVNC to remotely control the logic analysis system.

To change firewall settings to give other applications/ports access:

- 1 From the Windows Start menu, choose **Start>Control Panel**.
- 2 In the Control Panel window, open **Windows Firewall**.

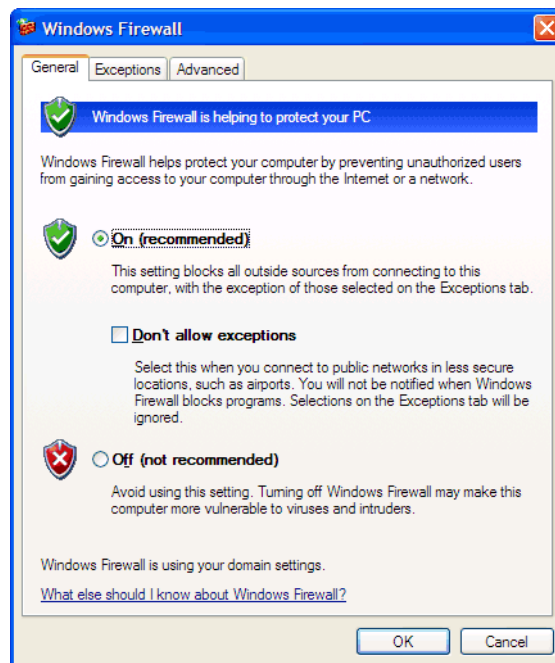

- 3 In the Windows Firewall dialog, click the **Exceptions** tab.

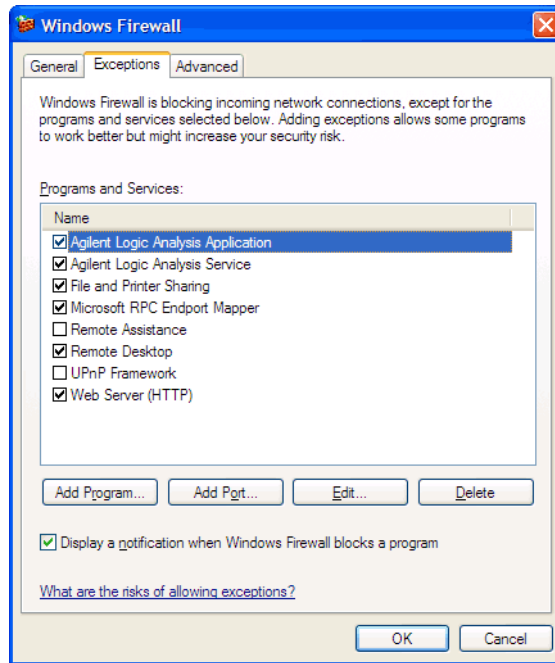

- 4 In the Exceptions tab, if the program or service is listed, check its box to enable it; otherwise, click **Add Program...** to give unlisted applications permission to penetrate the firewall, or click **Add Port...** to give unlisted ports access through the firewall.


Refer to the application's documentation for information on port numbers or other firewall setup information.

### NOTE


Note that there are separate Windows Firewall profiles: Domain for when the computer has domain membership, and Standard for when the computer has workgroup membership. If you change the type of membership, any changes you made to the Windows Firewall settings will have to be made again.

## To restore the logic analysis system firewall defaults

- 1 From the Windows Start menu, choose **Start>Control Panel**.
- 2 In the Control Panel window, open **Windows Firewall**.

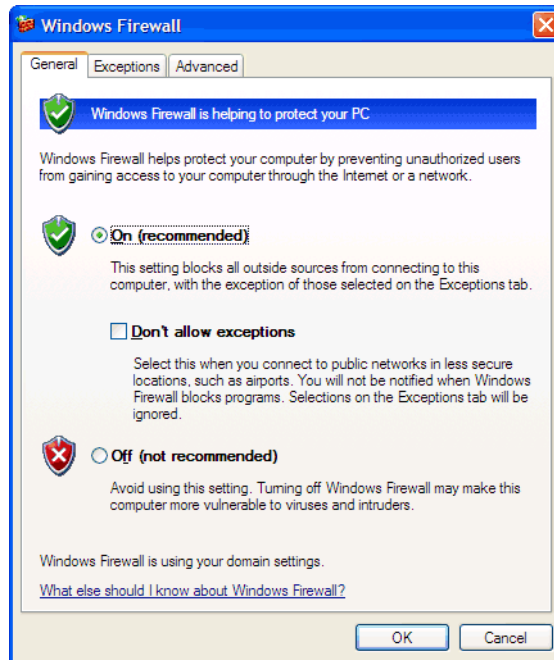

- 3 In the Windows Firewall dialog, click the **Advanced** tab.

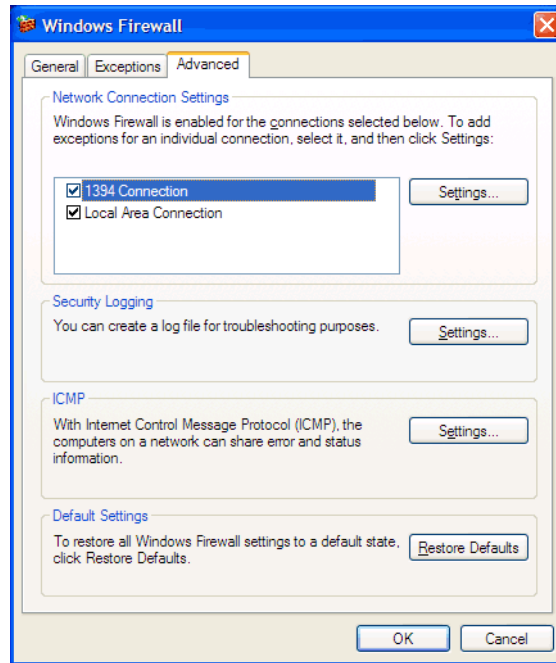

- 4 In the Advanced tab, click **Restore Defaults** to restore the default Windows Firewall settings.
- 5 In the confirmation dialog, Click **Yes**.
- 6 Click **OK** to close the Windows Firewall dialog.
- 7 From the Windows Start menu, choose **Start>Run**; then, enter or select the file "C:\Program Files\Agilent Technologies\Logic Analyzer\agFirewSP2.wsf", and click **OK**.

The logic analysis system firewall defaults enable the following exceptions:

- Agilent Logic Analysis Application program.
- Agilent Logic Analysis Service program.
- File and Printer Sharing.
- Microsoft RPC Endpoint Mapper TCP port.
- Remote Desktop service.
- Web Server (HTTP) port.

The logic analysis system firewall defaults also enable the following ICMP (Internet Control Message Protocol) settings:

- Allow incoming echo request.
- Allow outgoing destination unreachable.
- Allow outgoing time exceeded.

**NOTE**

Note that there are separate Windows Firewall profiles: Domain for when the computer has domain membership, and Standard for when the computer has workgroup membership. When you restore the logic analysis system firewall defaults, the defaults for both profiles are restored.

---

### To power off the system

You can power off the logic analysis system using Windows Shutdown or a short press of the power button.

#### NOTE

When powering off the logic analysis system, wait until the fans stop turning (about 15 seconds) before turning the logic analysis system back on. This ensures that internal circuitry restarts in a known state.

### Using the Windows Shutdown

On the logic analysis system desktop click **Start> Shut Down** or if you are running remote desktop, click **Start> Settings> Windows Security> Shut Down**. This:

- Closes all programs that are running.
- Writes all data to the disk.
- Turns off the power supply.
- If the system is unplugged while it is off and then plugged back in, the system will not power on until the power button is pressed.

### Using a Short Press of the Power Button

Pressing the power button on the logic analysis system for a short time (less than 2 seconds):

- Closes all programs that are running.
- Writes all data to the disk.
- Turns off the power supply.

If the power button on the Remote Desktop is depressed for a short time (less than 2 seconds or so), a message on the logic analysis system screen (not on the remote desktop) will pop up asking if you really want to power down. Clicking the 'yes' button results in the above events. Clicking 'no' will prevent the shutdown and not answering the dialog box (neither clicking "Yes" or "No") will have no effect. Further short presses on the power button will have no effect.

## Using a Long Press of the Power Button

### CAUTION

Only use a long press of the power button when the logic analysis system is unresponsive to Windows Shutdown or a short press of the power button.

---

Pressing the power button for more than 4 seconds will power the system down abruptly:

- Programs that are running will not be shut down. Any data that has not been written to the disk will be lost.
- Turns off the power supply.
- If the system is unplugged while it is off and then plugged back in, the system will not power on until the power button is pressed

## Unplugging the Power Cord or Power Loss

### CAUTION

Only unplug the power cord when the logic analysis system is unresponsive to all other methods for powering off the system.

---


Unplugging power or a power loss is similar to the long press of the power button with one exception:

- When the system is plugged back in, it will power up and boot into Windows.

### To remove the hard disk drive (16902B)

The 16902B logic analysis system has a removable hard disk drive. It can be removed and replaced without disassembling the instrument.

- 1 Power down the system (see [page 102](#)) and disconnect the power cable before removing the hard disk drive.
- 2 Loosen the thumb screw that holds the hard disk drive in place.
- 3 Pull the drive tray out to remove the disk drive.

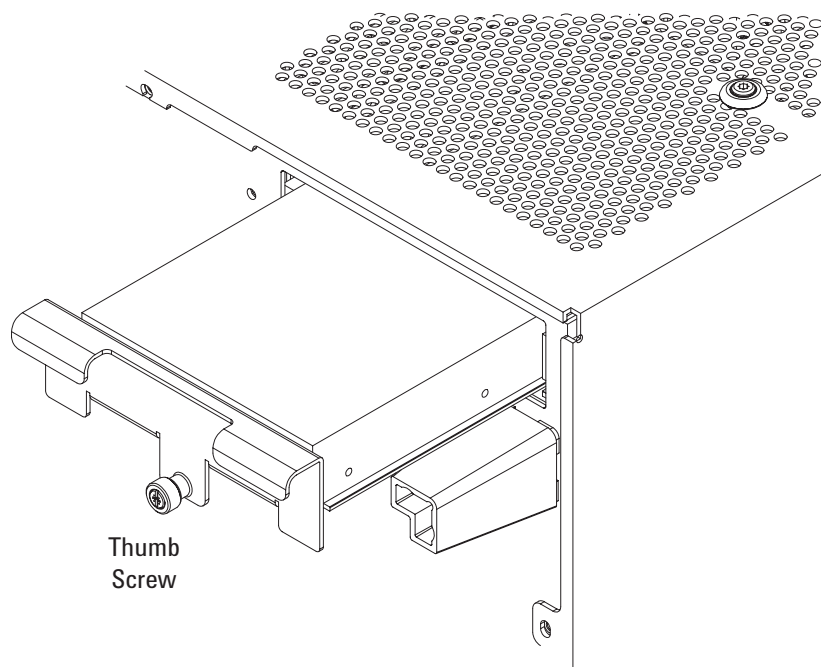



## To install interface cards (16900A, 16902A, 16902B, or 16903A)



### CAUTION

Electrostatic discharge can damage electronic components. Use grounded wrist straps and mats when performing this procedure.



The following instructions show you how to properly remove/replace the CPU tray and install PCI cards.

- 1 Power down the system and disconnect the power cable before installing interface cards.
- 2 Remove the cover.
  - a Remove 3 screws from the back panel using a T-10 screwdriver.
  - b Remove the handle using a T-15 screwdriver to remove the 2 screws.
  - c Slide the cover back and up to remove.

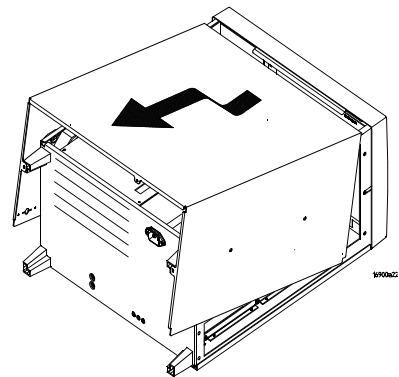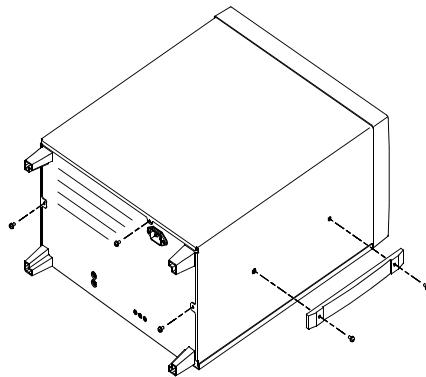


### CAUTION


When reinstalling the handle assembly, ensure that the screws are torqued to 2.372 Newton meters (21 inch pounds) so that they do not work themselves loose.

### 3 Disconnect cables from the module interface board.



#### a If you have a 16900A, 16902A:

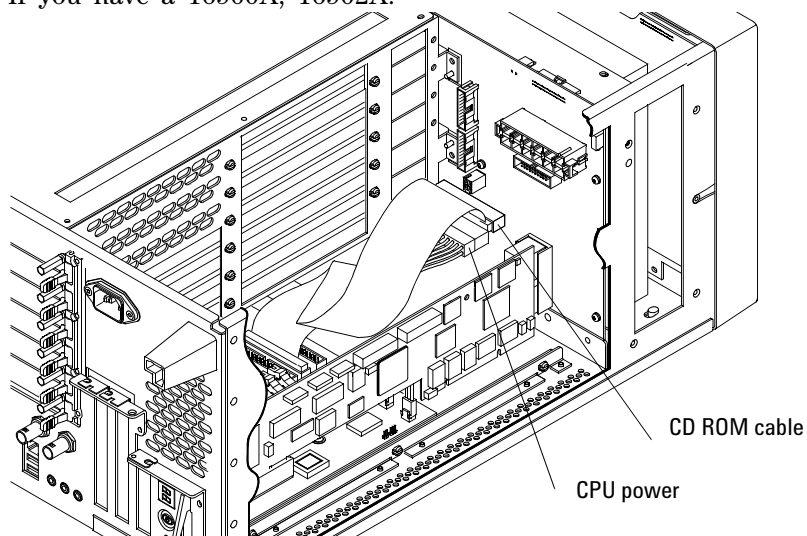

#### b If you have a 16903A or 16902B:

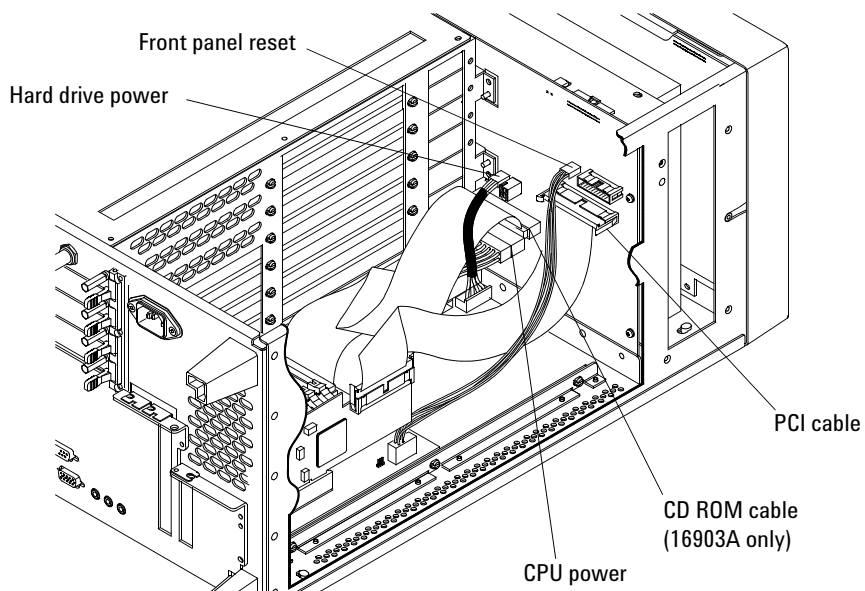


- 4** Remove screws from the back of the CPU tray using a Torx T-10 screwdriver.

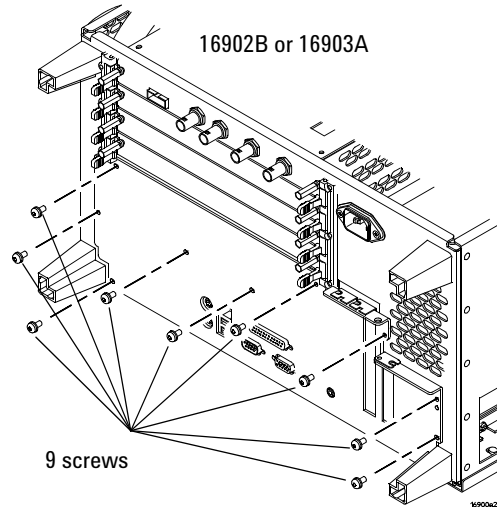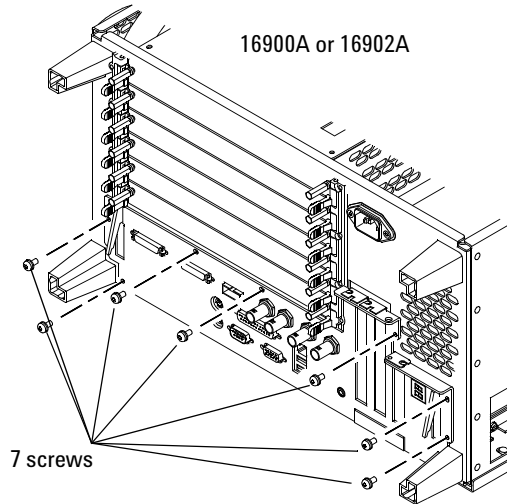


- 5** Remove the CPU tray.

- a** If you have a 16900A or 16902A, use the tray lever to disconnect the CPU board from the module interface board then slide the tray out being careful not to catch the loose cables on anything.

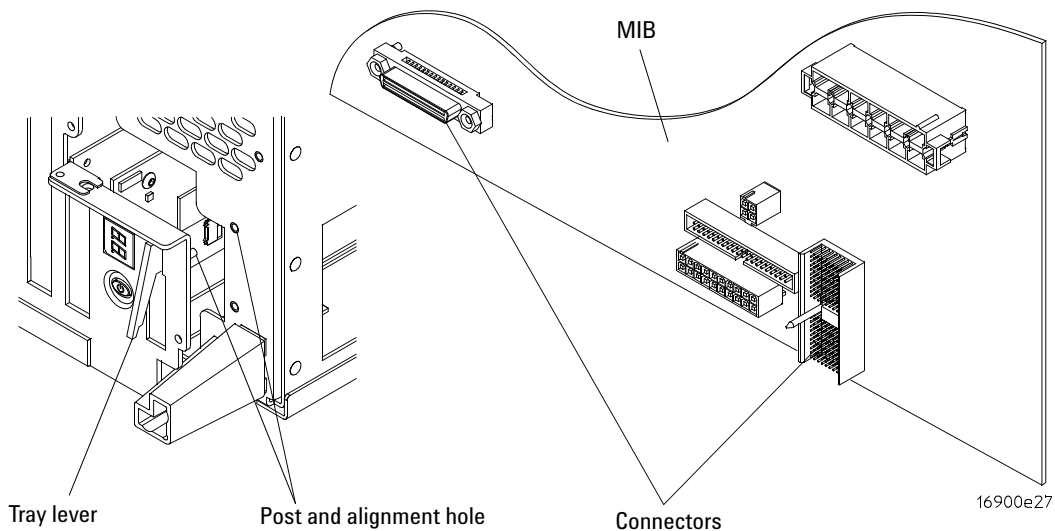

- b** If you have a 16902B or 16903A, slide the tray out being careful not to catch the loose cables on anything.
- 6** For the PCI card location you will be using, remove the screw securing the filler panel, swing the tall-slot plate out of the way if necessary, and remove the filler panel.

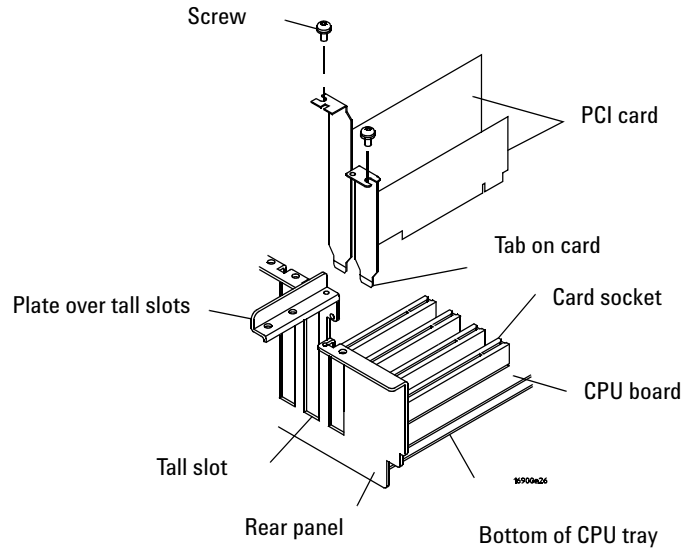

- 7** Insert the PCI card into the appropriate slot:
  - a** Ensure that the tab at the bottom of the card is aligned with the slot in the bottom of the CPU tray between the CPU board and the rear panel.
  - b** Press the card securely into the socket on the CPU board.
  - c** For cards in a tall slot, swing the plate back into place.
  - d** Secure the PCI card with the screw.
- 8** Slide the CPU tray back into the frame.
  - a** If you have a 16900A, 16902A, or 16902B ensure that the connectors between the CPU tray assembly and module interface board are properly seated. First align the posts and holes then use the tray levers to push the tray fully into place (see the figure in [step 5a](#)).
  - b** If you have a 16903A, slide the CPU tray into the frame.

**9** Insert and tighten the screws shown in [step 4](#).

**10** Reconnect the CPU cables shown in [step 3](#).

## 1 Gbit LAN Card

If you ordered a 1 Gbit LAN card with your 16900A, 16902A, or 16903A frame (Option 014) it will already be installed. If you order the 1 Gbit LAN card separately (as model E5860A), you need to install the the card following the instructions beginning on [page 105](#). To order a 1 Gbit LAN card go to: <http://www.agilent.com/find/contactus>

### To install interface cards (16901A)

#### CAUTION

Electrostatic discharge can damage electronic components. Use grounded wrist straps and mats when performing this procedure.

---



The following instructions show you how to properly remove the 16901A logic analysis system cover, install interface cards, and replace the cover.


- 1 Power down the system and disconnect the power cable before installing interface cards.

**2 Remove the cover:**


- a** Using a Torx T20 screwdriver, remove the handle assembly.
- b** Using a Torx T10 screwdriver, remove 6 screws that secure the cover to the chassis.

Optional: Removing the shroud may make it easier to remove and replace the cover. In this case, remove 4 T10 screws; then, remove the shroud.

- c** Slide the cover back to remove.

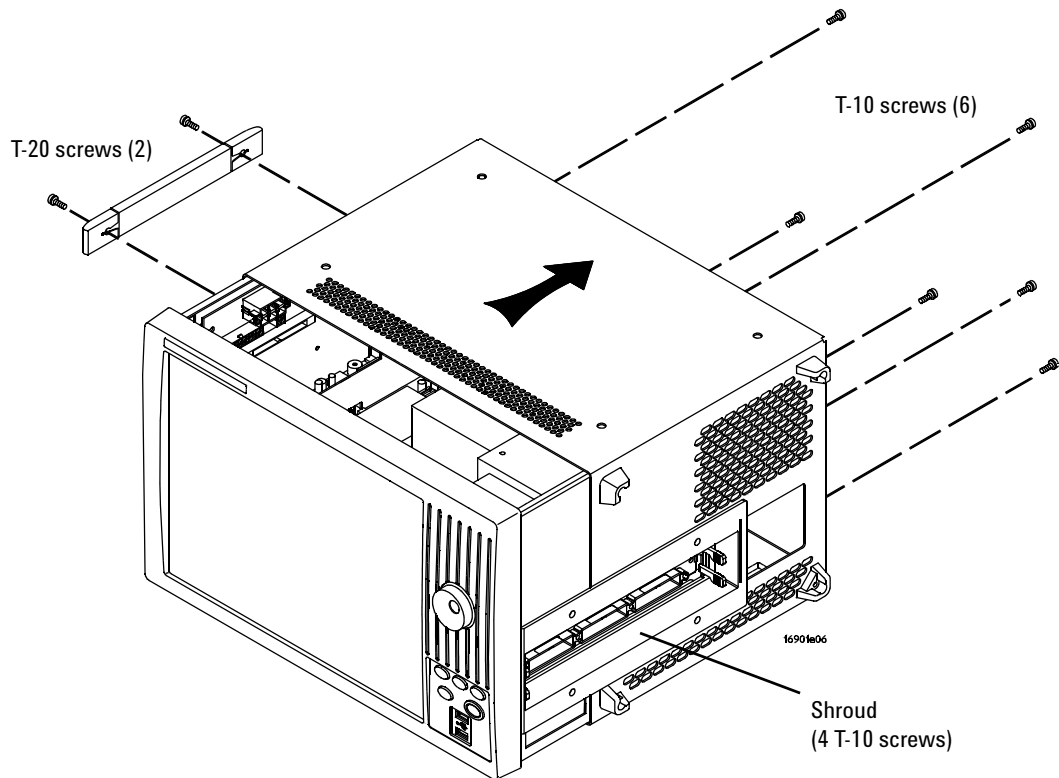

- 3 For the interface card location you will be using, using a Torx T10 screwdriver, remove the screw securing the slot cover; then, remove the slot cover.

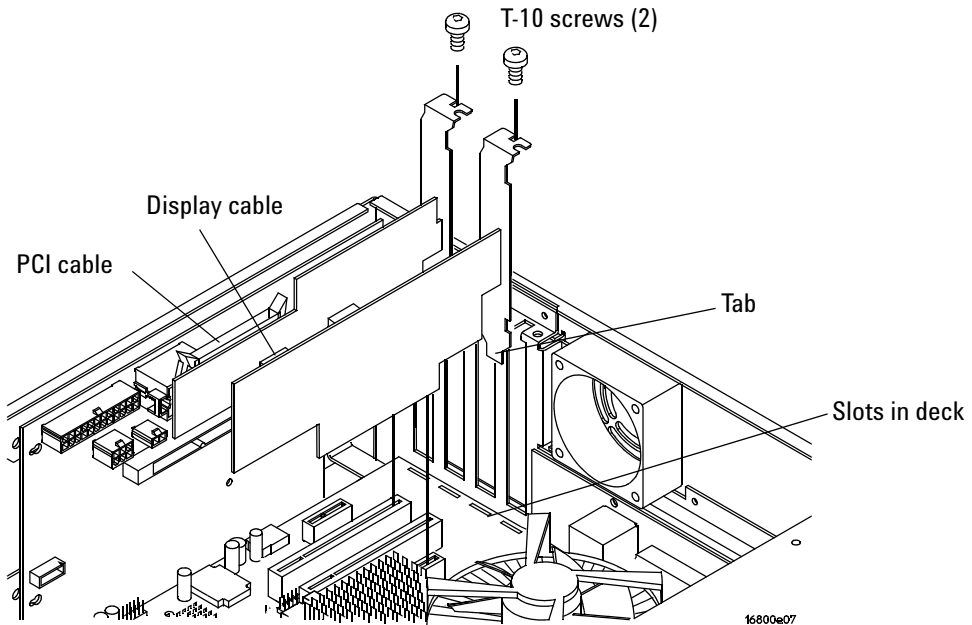

- 4 Insert the interface card into the appropriate slot:
  - a Ensure that the tab on the board's rear panel is aligned with the slot in the deck.
  - b Press the board securely into the socket on the motherboard.
  - c Replace the screw.
- 5 Replace the cover.


### CAUTION

When reinstalling the handle assembly, ensure that the screws are torqued to 2.372 Newton meters (21 inch pounds) so that they do not work themselves loose.




## To replace the CPU battery

- 1 Power down the system and disconnect the power cable before replacing the CPU battery.

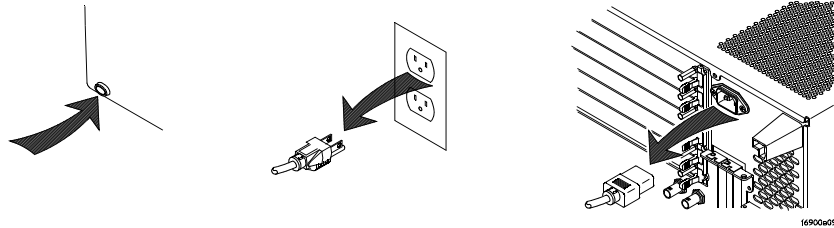

- 2 Access the motherboard using the steps described in [“To install interface cards \(16900A, 16902A, 16902B, or 16903A\)”](#) on page 105 or [“To install interface cards \(16901A\)”](#) on page 110.
- 3 Using a 1/8 inch flat-blade screwdriver, gently pry the battery from the battery receptacle.


CPU Battery  
(positive side up)

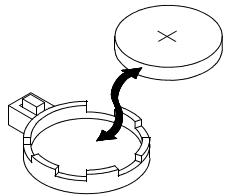

Battery Receptacle

- 4 Insert a new battery (CR2032 3V lithium) into the battery receptacle.
- 5 Put the frame back together by reversing the “access the motherboard” steps used earlier.



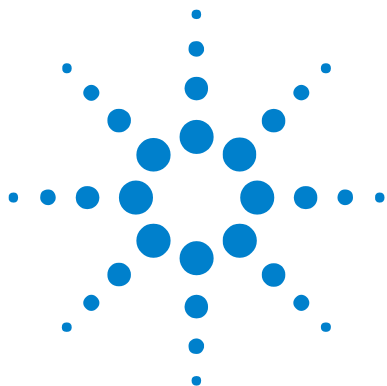


## 7 Solving Problems

- Running Self-Tests [116](#)
- If the logic analysis system powers itself down [117](#)
- If the Power LEDs do not come on [118](#)
- If you get a registry error and the system won't boot [118](#)
- If you can't write/read CDs [118](#)
- If there are multiframe connection problems [119](#)
- If there are network connection problems [121](#)
- Using the System Recovery Software [122](#)
- Contacting Agilent Service/Support [122](#)




## Running Self-Tests

- 1 In the Agilent logic analyzer application, click **Help>Self Test**.

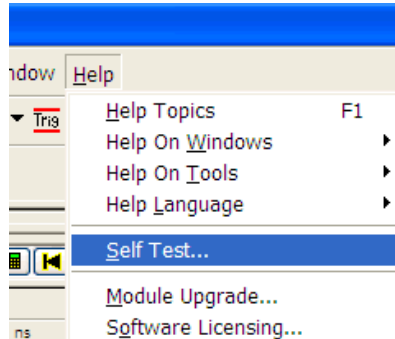


- 2 In the analysis system Self Test dialog, double click on the test you want to run.

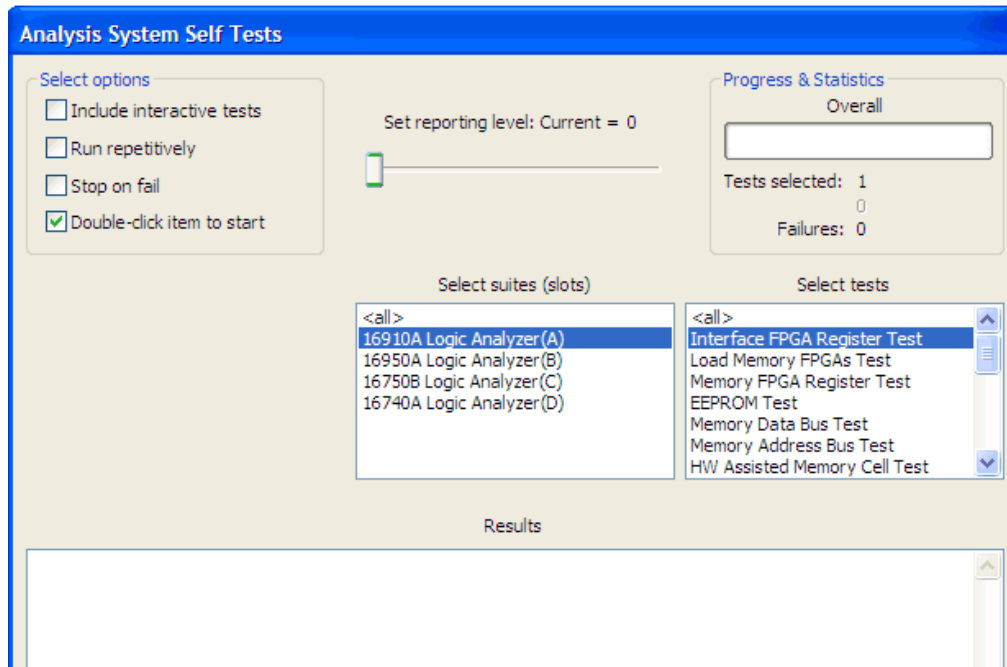

## If the logic analysis system powers itself down

### 16900A, 16902A, and 16902B logic analysis systems

The power LEDs on the frame help to figure out why a frame has powered itself down. For safety purposes, when any of these LEDs are lit the frame will not power back up until the power cord has been disconnected and then reconnected.

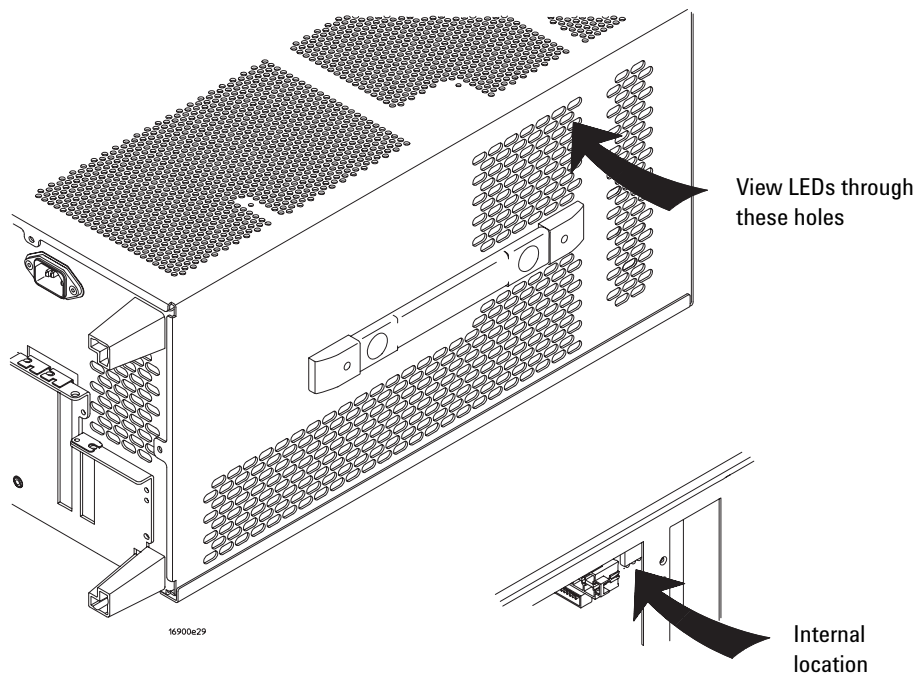

The colors indicate:

- Green – front power supply failure.
- Yellow – side power supply failure.
- Red – fan failure or 'overtemp'.

For any of the above conditions, go to <http://www.agilent.com/find/contactus> to contact your local service representative.

### All 16900 Series logic analysis systems

If the system warns you it is powering down before it powers down, the dialog will describe the problem (such as a fan/overtemp problem). If the logic analysis system just powers down, it is likely a power supply problem.

### If the Power LEDs do not come on

On the 16900A, 16902A, and 16902B frames, if the lights do not come on and if the system powers up momentarily when you plug it in, make sure the power buttons haven't become jammed or stuck in the pushed in position.

### If you get a registry error and the system won't boot

When powered off unexpectedly (for example, with a long press of the power button or a power loss), Windows XP may not flush all system information to disk and is vulnerable to problems. When you power back on you may get a "Registry Error" and the system won't boot. If this happens you will need to restore from the system install CD-ROM.

It is best to keep regular backups of your data and use proper power down procedures. If you have data that was not backed up that you need to try to save:

- 1 Physically remove the disk drive.
- 2 Mount it under another XP system.
- 3 Move the data to the boot disk until you can restore the operating system.

### If you can't write/read CDs

On 16900A, 16902A, and 16903A logic analysis systems:

- ✓ Ensure that Windows recognizes the drive. Click the **Start** button and then click **My Computer**. If the drive is not listed, perform a full scan

with your antivirus software to check for and remove viruses. Viruses can sometimes prevent Windows from recognizing the drive.

- ✓ The CD drive must be parallel to the ground when writing to disk. CDs may not be readable in any CD-ROM drive if it was not.
- ✓ If a CD fails, clean it by wiping it off with a clean dry rag and then try again. If it continues to fail, insert another CD to eliminate the possibility that the original CD is defective.

The 16900A, 16902A, and 16903A logic analysis systems have a DVD-ROM & CD-R/RW combination drive with the following features:

- 24X Speed CD-R Writing.
- 24X Speed CD-RW Writing.
- 24X Speed CD-ROM Reading.
- 8X Speed DVD-ROM Reading.
- Can read DVD-RAM, DVD-R and DVD-RW.
- Buffer Under Run Protection.
- Writing Method:
  - Disc at Once.
  - Session at Once.
  - Track at Once.
  - Multi-Session.
  - Fixed/Variable Packet Writing.


## If there are multiframe connection problems

All 1 Gbit LAN cards in a multiframe set up must be set with the same Jumbo Frames setting. Also, if a switch/hub is used, you must ensure that it supports the same size Jumbo Frame setting. If all 1 Gbit LAN cards are not set with the same Jumbo Frames setting, you might get error messages indicating so.

- One or more of the frames is not completely initialized yet... Please wait a few seconds.

To check the Jumbo Frames setting:

- 1 Choose **Start>Control Panel**. In the Control Panel window, open **Network Connections**.

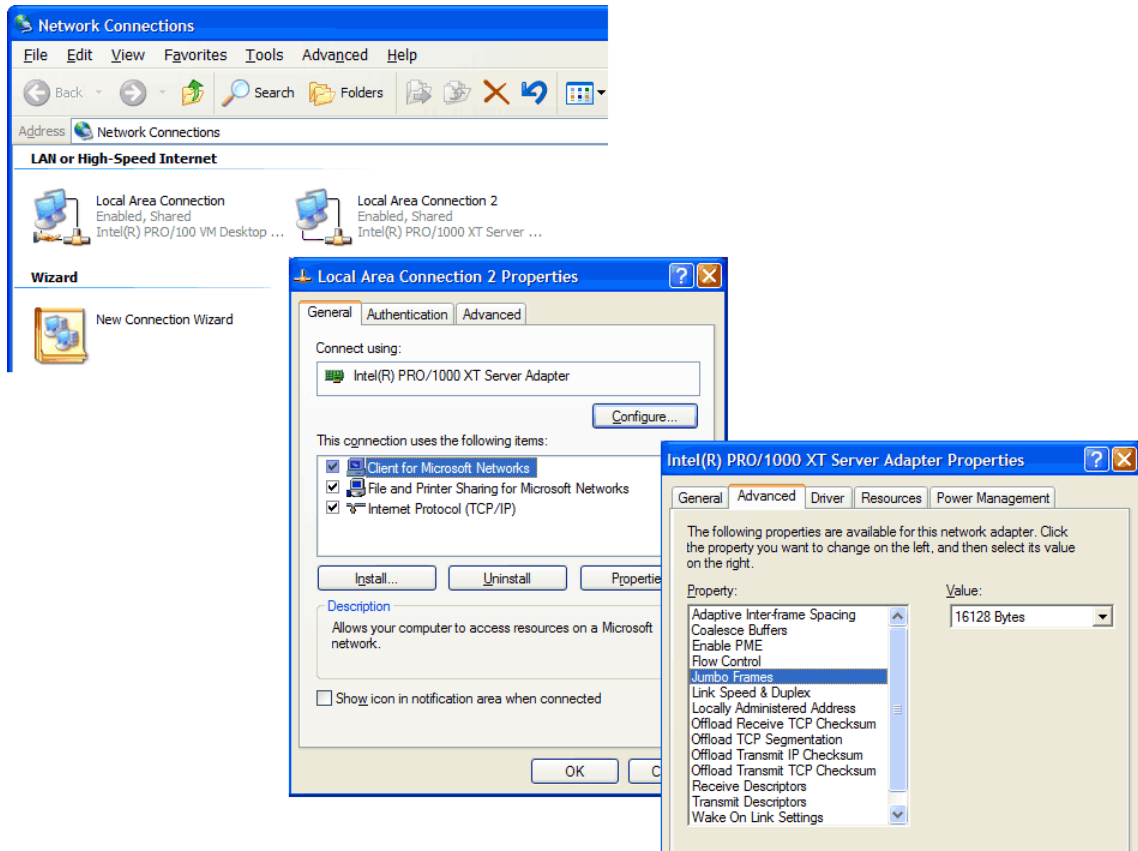

- 2 Right-click on the LAN connection and select **Properties**.
- 3 Click on **Configure** and then select the **Advanced** tab.
- 4 Select **Jumbo Frames** and the **Value**.



## If there are network connection problems

See the “Network Troubleshooting Guide” topic in the *Agilent Logic Analyzer* application’s online help. Briefly:

- The Windows Firewall must be set to allow access to the “Agilent Logic Analysis” service in order use remote and multiframe connections (see [“To restore the logic analysis system firewall defaults”](#) on page 99).
- The Windows Firewall must be set to respond to the following ICMP (Internet Control Message Protocol) requests in order to use remote and multiframe connections:
  - Allow incoming echo requests.
  - Allow outgoing destination unreachable.
  - Allow outgoing time exceeded.

(See [“To restore the logic analysis system firewall defaults”](#) on page 99.)

- The link activity light must be on; If these LEDs are not on, the LAN segment may be dead.
- If connecting two logic analysis systems directly together (that is, no hub or switch between them), make sure you are using a special cross-over cable.

If your IP address is in the same subnet as a working computer’s (use “ipconfig /all | more” to view IP addresses on machine in question), it is possible that your network administrators have denied access to any resources if the computer is not in the domain. In this case, you need to add the computer (logic analysis system) to the domain.

## Using the System Recovery Software

Restoring your system software might be necessary for the following reasons:

- Hard drive failure.
- Virus in the system or unstable system.
- Intentional disk clean - for example if you are passing the system to another team or returning it to a rental company and you do not want any data left on it.

You will need to have a keyboard and mouse connected. Follow the instructions provided with the recovery CD or DVD to restore your system software.

### CAUTION

Running the recovery disks will reformat your hard drive. All data files and programs will be overwritten. Save your data to CD or to another machine before performing this procedure.

---

## Contacting Agilent Service/Support

To locate a sales or service office near you, go to:  
<http://www.agilent.com/find/contactus>



## A Safety Notices

This apparatus has been designed and tested in accordance with IEC Publication 1010, Safety Requirements for Measuring Apparatus, and has been supplied in a safe condition. This is a Safety Class I instrument (provided with terminal for protective earthing). Before applying power, verify that the correct safety precautions are taken (see the following warnings). In addition, note the external markings on the instrument that are described under "Safety Symbols."

### Warnings

- Before turning on the instrument, you must connect the protective earth terminal of the instrument to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. You must not negate the protective action by using an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.
- Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short-circuited fuse holders. To do so could cause a shock or fire hazard.
- If you energize this instrument by an auto transformer (for voltage reduction or mains isolation), the common terminal must be connected to the earth terminal of the power source.
- Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.



- Service instructions are for trained service personnel. To avoid dangerous electric shock, do not perform any service unless qualified to do so. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
- Do not install substitute parts or perform any unauthorized modification to the instrument.
- Capacitors inside the instrument may retain a charge even if the instrument is disconnected from its source of supply.
- Do not operate the instrument in the presence of flammable gasses or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.
- Do not use the instrument in a manner not specified by the manufacturer.
- To optimize your comfort and productivity, it is important that you set up your work area correctly and use your equipment properly. Refer to [http://www.agilent.com/quality/Working\\_In\\_Comfort.pdf](http://www.agilent.com/quality/Working_In_Comfort.pdf) for set-up and use recommendations.
- Position equipment so that it is not difficult to disconnect the power cord.

### To clean the instrument

If the instrument requires cleaning:

- 1 Remove power from the instrument.
- 2 Clean the external surfaces of the instrument with a soft cloth dampened with a mixture of mild detergent and water.
- 3 Make sure that the instrument is completely dry before reconnecting it to a power source.

### Safety Symbols



Instruction manual symbol: the product is marked with this symbol when it is necessary for you to refer to the instruction manual in order to protect against damage to the product.



Hazardous voltage symbol.

Earth terminal symbol: Used to indicate a circuit common connected to grounded chassis.



# Index

## Numerics

16720A, installation, 63  
16742/41/40A, installation, 56  
16752/51/50A/B, installation, 56  
16756/55/54/53A installation, 41  
16760A, installation, 51  
16900A, 4  
16901A, 4  
16902A, 4  
16902B, 4  
16903A, 4  
16911/10A installation, 46  
16950A installation, 41  
16951/50B, installation, 36  
16960A, installation, 30

## A

accessories  
    included, 4  
    optional, 4  
administrator, 70  
administrator account, 74  
Agilent web  
    probes, 24  
    service/support, 117, 122  
air circulation, 15, 28  
altitude, 93  
antivirus, 17, 74

## B

backup, 95

## C

cable  
    flying lead, 4  
    multiframe, 4  
cards, measurement, 4

caution  
    electrostatic discharge, 26, 103, 105, 110  
CD  
    features, 119  
    product software, 95  
    write/read problems, 119  
change network settings, 96  
characteristics, 93, 94  
cleaning the instrument, 123  
comparison of models, 4  
computer name, 72  
connect  
    keyboard, 14  
    LAN, 17  
    logic analyzer probes, 24  
    monitor, 14  
    mouse, 14  
    power, 15  
    printer, 18  
    time correlation fixture, 19  
connection  
    problems, 119  
connection, high speed, 72  
contact information, 122  
cooling, 15, 28  
cover removal, 111  
CPU  
    tray removal, 105, 110  
CPU battery replacement, 113  
cross-triggering, 89

## D

debugging network, 121  
disk  
    clean/reformat, 122  
    read error, 119  
display resolution, 4  
domain, 70, 72  
DVD-ROM, 119

## E

ejector levers, 27  
electrical characteristics, 93  
electrostatic discharge, 26, 103, 105, 110  
environmental characteristics, 93

## F

filler panel removal, 27  
firewall, 17, 74  
    changing settings, 74, 97  
flowchart, installation, 5  
flying lead cable, 4  
frames, multiple, 4

## G

getting started, 5, 92  
grounding, 26, 103, 105, 110

## H

hard drive, 122  
hardware, setup, 13  
help, 92  
high-speed connection, 72  
humidity, 93

## I

ICMP settings, 101  
install  
    interface cards, 105, 110  
    measurement modules, 26  
    software, 95  
interface cards, 105, 110  
internet, 72  
inverse assemblers, 95

## Index

### J

jumbo frames setting, 119

### K

keyboard, 4, 14

### L

LAN, 14, 72  
    connect, 17  
LAN card, 4, 109  
LEDs, 117, 118

### M

measurement modules, 4  
    16720A, 63  
    16742/41/40A, 16752/51/50A/B, 56  
    16756/55/54/53A, 41  
    16760A, 51  
    16911/10A, 46  
    16950A, 41  
    16951/50B, 36  
    16960A, 30  
    general installation, 26  
    screw replacement, 24, 26  
minimum space for cooling, 15  
model comparison, 4  
monitor, 4, 14  
mouse, 4, 14  
multiframe cable, 4  
multiframe configuration, 75  
    other notes, 89  
    performance, 84  
multiple frames, 4

### N

network  
    adding logic analyzer, 70  
    connection decision, 70  
    debugging, 121  
network connection problems, 121  
network settings, 96

### O

online help, 92  
optional accessories, 4  
optional tools, 95  
ordering thumb screws, 24, 26  
oscilloscope time markers, 19  
oscilloscope, time correlation, 19  
overheating, 15  
overview, 3  
overview flowchart, 5

### P

password, 72  
PCI  
    cards, 105, 110  
    LAN card, 109  
    slots, 105, 110  
performance multiframe configuration, 84  
    considerations when running, 88  
power  
    connect, 15  
    LEDs, 117  
    problems, 117  
    requirements, 93  
    turning off, 102  
    turning on, 69  
printer, 18  
probes, 4, 24

### Q

quick start, 92

### R

read problems, CD, 119  
recovery procedures, 122  
registry error, 118  
remove  
    CPU tray, 105, 110  
    filler panels, 27  
removing  
    cover, 111  
replace  
    CPU battery, 113  
restoring system, 122  
running self tests, 116

### S

safety  
    notices, 123  
    symbols, 123  
screw replacement, 24, 26  
self tests, 116  
service  
    contacting Agilent, 122  
    ground instrument, 105, 110  
    ground modules, 26, 103  
    web address, 117  
shut down system, 102  
software  
    add-in, 95  
    installation, 70, 74, 95  
    updating, 95  
    version requirements, 23, 62  
space between instruments, 15  
specifications, 94  
standalone operation, 70  
supplied accessories, 4  
symbols  
    safety, 123  
system  
    power, 117  
    recovery, 122  
    software, 95

### T

target control port, 4  
temperature, 93  
thumb screws, measurement module, 24, 26  
time correlation, 89  
tips for experienced users, 92  
tools, optional, 95  
touch off button, 15  
Trigger In, 19, 89, 93  
Trigger Out, 19, 89

### U

update software, 95

### V

version requirements, 23, 62



virus software, [17](#), [74](#)

## **W**

warnings, [123](#)

web address

probes, [24](#)

service/support, [117](#)

windows

power problems, [118](#)

updates, [74](#)

welcome, [70](#)

welcome questions, [72](#)

Windows Firewall settings

changing, [97](#)

workgroup, [70](#)

changing, [74](#)

